 


ALCATEL

ONE TOUCH


English

## MENU

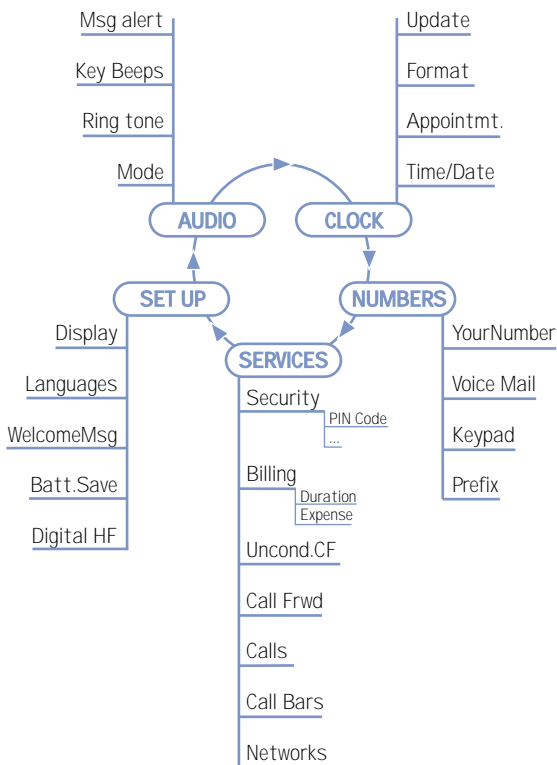






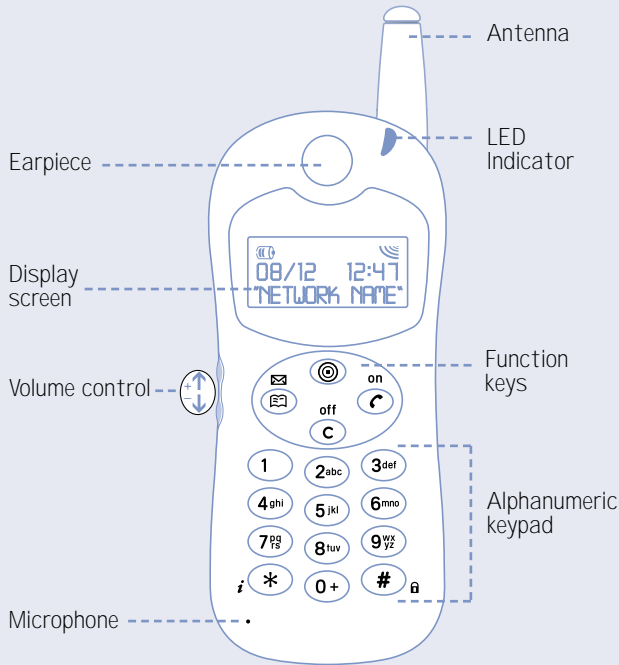  







3DS05856AAAA 02

All rights reserved. Alcatel reserves the right, in the customer's interest, to alter material or technical specifications without prior notice.



## KEYS

-  **Switch the phone on**  
(long keypress)
-  **Send or Take a call / Hang up**  
**Access call memory (Redial)**
-  **Switch the phone off / Return to standby screen**  
(long keypress)
-  **Delete a character / Return to previous screen**
-  **Access short messages**  
(long keypress)
-  **Access directory**
-  **Access voice mail**  
(long keypress)
-  **Access MENU / Confirm an option**
-  **Lock keypad**  
(long keypress)
-  **Display your number <sup>(1)</sup>**  
(long keypress)
-  **Volume control / Scroll options** (in this case, you can use the  and  keys).

! Do not remove the antenna.








<sup>(1)</sup> See Chapter 3, page 2 to enter your number.




1

2

## ICONS



-  **Battery charge level**
-  **"Silent" mode:**  
You have activated the "Audio/Mode/Silent" MENU option so that no alert tone is emitted by your phone (ring tone, appointment reminder, etc.) .....Chapter 7, page 3
-  **Unanswered incoming call:**  
You have been called but have not answered. The icon clears when ALL the unanswered incoming calls stored in the call memory have been consulted .....Chapter 5, page 2
-  **Voice message received:**  
You must call your voice mail to listen to your messages  
or  
 .....Chapter 5, page 3
-  **Unread short message:**  
You have received a short message but have not read it. The icon clears when ALL the messages have been read in FULL ..... Chapter 6, page 1
-  **Short message list is full:**  
Your terminal cannot store any more messages. You must delete at least one message by accessing the list .....Chapter 6, page 1

-  **Call forwarding activated:**  
You have activated the "Services/Uncond.CF" MENU option to forward your calls .....Chapter 7, page 7
-  **Appointment scheduled:**  
You have activated the "Clock/Appointmt." MENU option. The icon automatically clears when the appointment time passes .....Chapter 7, page 4
-  **Signal strength indicator**

## LED INDICATOR

- Green, flashing:**  
The flashing indicates that your phone is connected to the network.
- Green, steady:**  
The phone is in Hands-Free mode .....Chapter 3, page 3
- Red, flashing:**  
Battery charge is too low.

3

4

## SAFETY AND PRECAUTIONS

We recommend that you read this chapter carefully before use.

As with all radio transceivers, your mobile phone emits electromagnetic waves. This phone conforms to international regulations insofar as it is used under normal conditions and in accordance with the following instructions.

**THE MANUFACTURER DISCLAIMS ANY LIABILITY FOR DAMAGE WHICH MAY RESULT AS A CONSEQUENCE OF IMPROPER USE OR USE CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN.**

### • Conditions of use

The retractable antenna (depending on terminal) must be fully extended. Avoid contact between the antenna and your skin when the phone is switched on.

Switch the phone off before boarding an aircraft. Use could lead to legal action against the user.

Switch the phone off when in health care facilities except in areas specified.

Operation may interfere with the functionality of electronic medical devices (pacemakers, hearing aids, insulin pumps, etc.). Persons with a pacemaker should not carry the phone in a breast pocket. Persons with a pacemaker or hearing aid should use the ear opposite the device.

Switch your phone off when near gas or flammable substances.

Strictly obey all signs and instructions when in a fuel depot or chemical plant, at a refuelling point (service station) or any potentially explosive atmosphere.

Do not let children use the phone without supervision.

Do not attempt to open or repair it yourself.

Use only the dry cells, batteries, chargers and accessories approved by the manufacturer. The manufacturer disclaims any liability for damage caused by use of other batteries, chargers or accessories.

Switch your phone off before removing the dry cells or battery.

### • Environment

Do not expose the phone to unfavourable environmental conditions (humidity, rain, liquid infiltration, dust, sea air, etc.).

Outside the manufacturer's recommended operating temperature range (-20° C to +55° C), the legibility of the phone's display may be impaired, though this is temporary and not serious.

Do not attempt to open the battery or dry cells for they contain chemical substances.

Do not dispose of used batteries in household waste. Batteries must be disposed of in accordance with locally applicable environmental legislation.

### • Traffic safety

Remember to always check whether local legislation allows operation of a mobile phone while driving a vehicle.

The phone must imperatively be connected to an external antenna when switched on in a vehicle. Electromagnetic waves may otherwise interfere with the vehicle electronics.

Check that the antenna is mounted and located away from driver and passengers or separated from them by a metal screen (e.g. car roof). Park your car before using the phone. User should use the "Easy-to-install Hands-Free Car Kit" (ref. MP 70) or the "Digital Hands-Free Car Kit" (ref. MP 71) accessories while driving.

Check with your dealer or manufacturer if the car's electronic systems (ABS anti-lock brakes, air bag) are adequately shielded from mobile phone RF energy. Always avoid placing the phone on the dashboard.

 
1

2

## GETTING STARTED

### 1 - Inserting the SIM card

The SIM card supplied with the subscription must be micro sized.

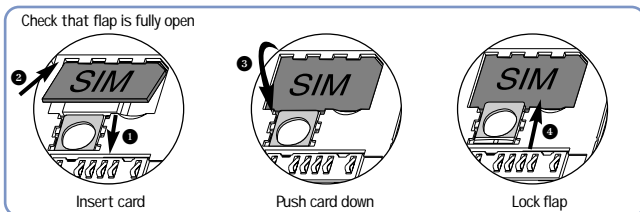


Do not leave your PIN code <sup>(1)</sup> near your phone and store your card in a safe place when you are not using it.

### 2 - Powering your phone

 For further information on inserting your battery, see "Recommendations" leaflet.

### 3 - Switching your phone on

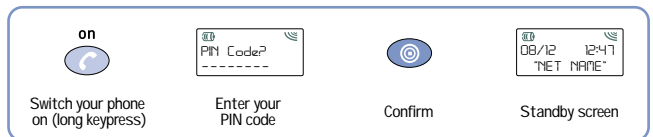

- While the phone is searching for a network, <<<-->> is displayed. (???-??-?? is displayed if your SIM card is not identified by the network <sup>(1)</sup>).
- If you are asked to check the time and date, enter the data if needed, then confirm by (use the volume control keys to switch from one to the other).
- If Cellbroadcast messages are displayed, use the volume control keys to browse through them and/or press the key to delete them (see "Services/Networks/SMS-CB" menu option in Chapter 7, page 11).
- One of the following symbols may appear next to the network name:
  - : You have selected the "Manual" search mode for network connection using the "Services/Networks/Searching" menu option (Chapter 7, page 11).
  - ! : You are connected to a network that isn't your subscribed network.
  - 🏠 : You are in an area with preferential rates <sup>(2)</sup>.

3

4

<sup>(1)</sup> If you do not know your code, see your operator.


<sup>(1)</sup> See your operator.

<sup>(2)</sup> Check the availability of this service with your operator.

# CALLS

 
In order to make or receive a call, you **MUST** switch your phone on and fully extend the retractable antenna (depending on model).

## MAKING A CALL

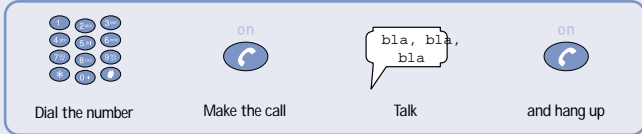

If you make a mistake, you can erase a digit by pressing the **C** key. To enter characters "+" and "P" (pause), make a long keypress on **0** (the following characters scroll: 0, +, • and P).

### • Making an international call

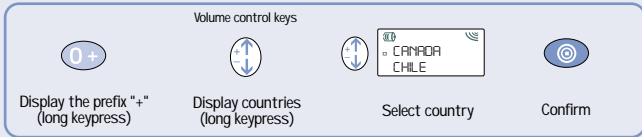 

Once the country code is displayed, dial the rest of the number and make the call.

### • Making an emergency call

To make an emergency call, dial 112 or any other number given by your operator.

 
As with any wireless phones, this phone relies upon radio signals. Therefore connection for emergency calls in all conditions and at all times cannot be guaranteed.

1

## RECEIVING A CALL

3

An incoming call is indicated by a progressively louder ring tone <sup>(1)</sup>, unless the **A** icon is displayed (you have activated the "Audio/Mode/Silent" menu option - Chapter 7).

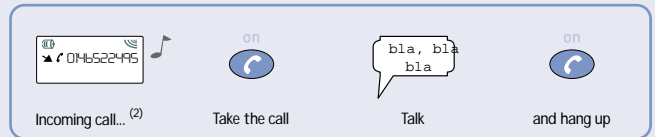

### • Switching the ring tone off (without losing the call)

Press the **C** key when the phone is ringing; you can still answer the call by pressing the **☎** key.

### • Adjusting the ring tone and earpiece volume

Use volume control keys **⬆**.

## DISPLAYING YOUR NUMBER

You can display your own number by pressing the **☎** key (long keypress).

If your number is not displayed, enter it and confirm by pressing the **☎** key. To later modify it, see the "Numbers/YourNumber" menu option (Chapter 7, page 5).

<sup>(1)</sup> Use the volume control keys **⬆** to increase/decrease the volume if necessary.

<sup>(2)</sup> Caller's number/ID is displayed if given by the network. Check the availability of this service with your operator (see "Services/Calls/Caller ID?" menu option - Chapter 7, page 9).

2

 
## WHILE COMMUNICATING, YOU CAN ALSO...

1 - Press the **☎** key to access the following options:


- Handsfree?** Activate/deactivate the Hands-Free mode integrated in the phone (**☎** symbol then switches to **☎**).
- Dial ?** Make a second call (an ongoing call will be automatically put on hold, you can switch between calls by pressing the **☎** key).
- Call hold?** Put the ongoing call on hold (you can later resume the call by pressing the **☎** key).
- Save Num.?** Store a phone number in the call memory (Chapter 5).
- Messages ?** Read your short messages.
- Exit ?** Return to the previous screen.

**CAUTION:** Keep the phone away from your ear when Hands-Free mode is activated, the amplified volume could damage your hearing.

How to use the options?

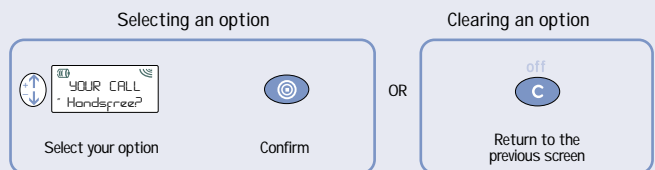

2 - Handling a second incoming call

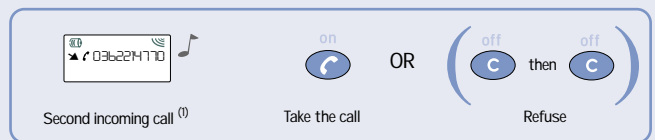 

- If you press the **☎** key, the incoming call is accepted and the ongoing call is automatically put on hold: you can then swap between calls by pressing the **☎** key.
- If you press the **☎** key, you shall access the options (the incoming call is accepted ending the ongoing call, ...).

You can use the **2** key to scroll upwards, and the **8** key to scroll downwards.

<sup>(1)</sup> Caller's number/ID is displayed if given by the network. Check the availability of this service with your operator (see "Services/Calls/Caller ID?" menu option - Chapter 7, page 9).

3


4

# DIRECTORY

 
Your directory can hold up to 250 files (names and phone numbers) which are stored in your SIM card <sup>(1)</sup>.

## ACCESSING THE DIRECTORY

**1 - If your directory is empty**, the phone suggests that you create the first file:

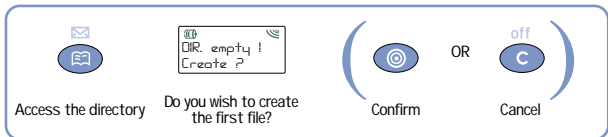

 • Entering the name and phone number in the first file

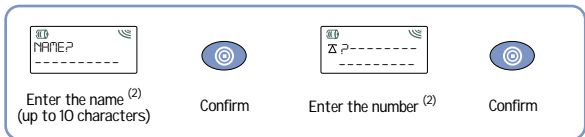

If you wish to use your directory abroad, store the numbers in international format with "+" (Chapter 3, page 1).

Use the key to move from one character to another.

• To create files

See "Create?" option in the paragraph "MANAGING YOUR DIRECTORY".

<sup>(1)</sup> The capacity of your SIM card depends on your network operator.  
<sup>(2)</sup> If you make a mistake, you can erase a digit by pressing the key.

To enter a name <sup>(1)</sup>, press the corresponding key as many times as necessary as shown in the table below:

Key	Number of keypresses											
	1	2	3	4	5	6	7	8	9	10	11	12
	SP	1	_	,	'	"	:	;	?	¿	!	i
	A	B	C	2	Á	Ä	Æ	ç				
	D	E	F	3	É	Δ	Φ					
	G	H	I	4	Γ							
	J	K	L	5	Λ							
	M	N	O	6	Ñ	Ω						
	P	Q	R	S	7	Β	Π	θ	Σ			
	T	U	V	8	ü	θ						
	W	X	Y	Z	9	Ξ	Ψ					
	+	0	•	-	=	/	%	<	>	(	)	
	*											
	#	@	\$	£	¥	&	§					

SP = "Space" character

Example: Press twice for letter B

 
To enter a number, use keys from to .

Characters "+" and "P" (pause) are displayed with a long keypress on (the following characters scroll: 0, +, • and P).

1

2

**2- If your directory is not empty**, the list of names and numbers is displayed:

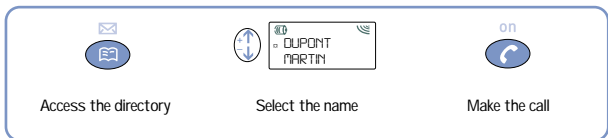

• Selecting a name by its first character

You can also use the alphabetic search by entering the first letter of the name.

Example: Press the key twice to find the first name beginning with "N".

Then scroll the list to select the name with the volume control keys .

• Displaying a phone number

You can display the phone number corresponding to the selected name by pressing the key.

## EXITING YOUR DIRECTORY

 
From the names list, you can press the key to return to the standby screen.

## MANAGING YOUR DIRECTORY

From the names list, you can access the following options by pressing the key:

- Create ? Create a file (name and phone number) which will be automatically stored in your SIM card (proceed as described in the previous paragraph).
- Modif.Num? Display/modify the phone number corresponding to the selected name.
- ModifName? Modify the selected name.
- File No. ? Display/modify the selected file number.
- Delete ? Delete the selected file (name and phone number).
- Exit ? Return to the names list in the directory.

How to use the options?

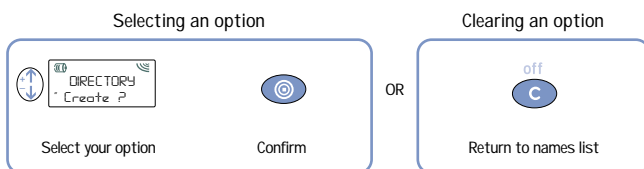

You can use the key to scroll upwards, and the key to scroll downwards.


3

4

# CALL MEMORY

 Your phone can store up to 40 numbers in the call memory.

## ACCESSING THE CALL MEMORY

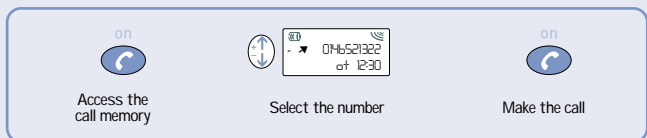


- The last call is displayed first.
- Depending on the type of call, one of the following symbols is displayed:
  - ▲ : Answered incoming call
  - : Unanswered incoming call
  - : Outgoing call
  - M : Number stored after using "Save Num.?" option, during a call for example. Store it in your directory using the "DIR. Save?" option in paragraph "MANAGING/CLEARING CALL MEMORY".

## EXITING THE CALL MEMORY

 
From the stored numbers list, you can return to the standby screen by pressing the **C** key.

## MANAGING/CLEARING THE CALL MEMORY

From the stored numbers list, you can access the following options by pressing the **OK** key:

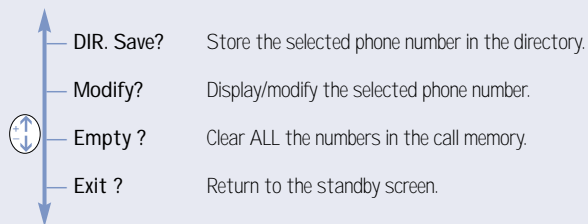

How to use the options?

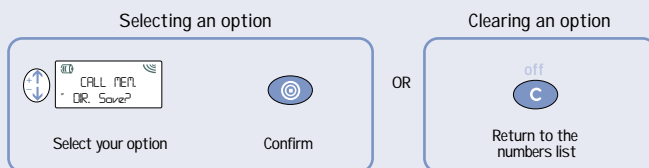 

You can use the **2** key to scroll upwards, and the **8** key to scroll downwards.

# VOICE MAIL <sup>(1)</sup>

The network provides the voice mail service to ensure that you do not miss any calls: it works like an answering machine that you can consult at any time.

 


- If you cannot access your operator's voice mail number, dial the number that was supplied to you with your subscription.
- Contact your operator before using your voice mail abroad.
- To later modify this number, use the "Numbers/Voice Mail" menu option (Chapter 7, page 5).


# € CONVERSION / SAVING A NUMBER

When you are in the standby screen, you can also enter:

- an amount to be converted from Euros to another currency or from a currency to Euros
- a number to be stored in the call memory.

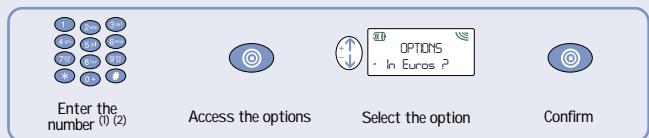

 The available options are the following:

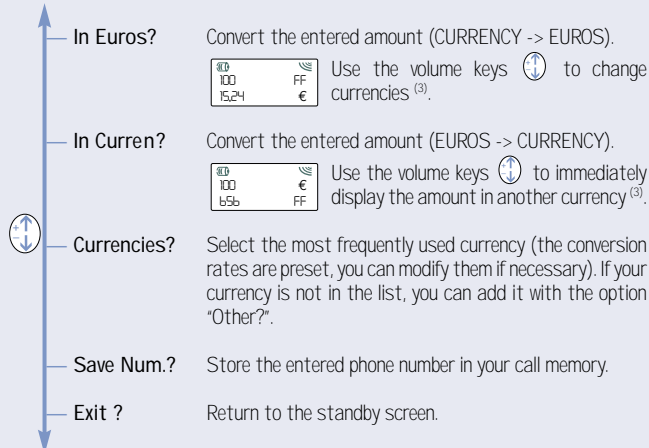

<sup>(1)</sup> The access to this function depends upon your operator and the SIM card you are using.

<sup>(1)</sup> You can enter a decimal point by pressing the **0** key (long keypress).

<sup>(2)</sup> If you make a mistake, you can erase a digit by pressing the **C** key.

<sup>(3)</sup> The operator's currency is given by default.

# SHORT MESSAGES <sup>(1)</sup>

Your phone can handle up to 20 messages stored in your SIM card <sup>(2)</sup>. The icon and an optional beep <sup>(3)</sup> indicate that a message has been received.

## READING YOUR SHORT MESSAGES

1 - If your phone contains messages, the list is displayed:



- The last message received is displayed first.
- The icon is cleared when you have read ALL the messages.
- The icon is displayed when the list is full: your terminal will store no more messages. See the "Delete?" option in the paragraph MANAGING YOUR SHORT MESSAGES".
- Depending on the type of message, one of the following symbols is displayed:
  - ▲ : Message read
  - : Message unread
  - ✱ : Message sent
  - : Message sent and acknowledgement received
  - x : Message sent and no acknowledgement received or message not delivered (in this case, you must try to send the message again).

<sup>(1)</sup> Check the availability of this service with your operator.  
<sup>(2)</sup> Capacity of the SIM card depends on the operator.  
<sup>(3)</sup> To deactivate the beep, use the "Audios/Msg alert" menu option (Chapter 7, page 3).

1

## HANDLING YOUR SHORT MESSAGES

From the messages list, you can access the following options by pressing the key:

 
	Delete ?	Delete the selected message.
	Create ?	Create a new message (see paragraph 2 - "If there is no message,...").
	Modify ?	Modify the text of the selected message and send it.
	Save Num.?	Store the first number contained in the message in the call memory.
	Send ?	Send the selected message again after modifying the recipient's name or the parameters.
	Parameter?	The following parameters must be adjusted: <ul style="list-style-type: none"> <li>- <b>Service Ctr.</b>: call your operator's service center <sup>(1)</sup> (may be given automatically).</li> <li>- <b>Format</b>: message to be sent to your correspondent (SMS, e-mail, fax, etc.).</li> <li>- <b>Retry Dur.</b>: time during which the network presents the message again to your recipient in case of unsuccessful delivery.</li> <li>- <b>Receipt</b>: Acknowledgement receipt request.</li> </ul>
	Exit ?	Return to messages list.

<sup>(1)</sup> Contact your operator if necessary.

3


6

2 - If there is no message, the phone suggests that you create one:

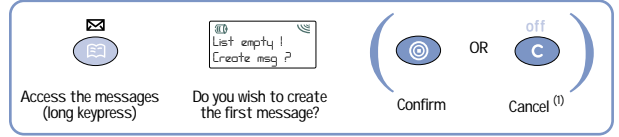


You can create a new message ("New?") or from one of the suggested messages ("CannedMsg?"):

 • Preparing the message

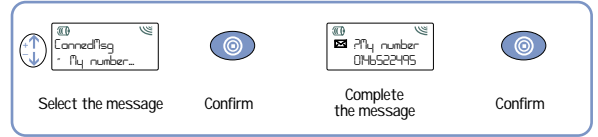

• Sending the message

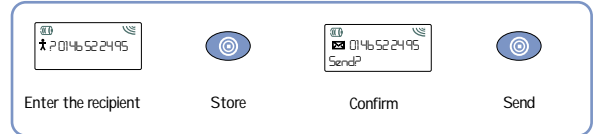 


To use a name in the directory, press the key, select the name using (or alphabetical search) and confirm by .

If the message has been unsuccessfully delivered, see the "Parameter?" option in the paragraph "MANAGING YOUR SHORT MESSAGES".

<sup>(1)</sup> On some terminals, this key gives access to the parameters described in chapter 6, page 3.

2

 How to use the options?

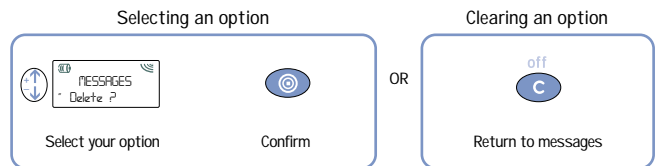

## CALL BACK

If a phone number is contained in a message, you can:

- call it directly by pressing the key,
- store it in the call memory using the "Save Num?" option in the paragraph "MANAGING YOUR SHORT MESSAGES".

## EXITING YOUR SHORT MESSAGES

From the message list, you can return to the standby screen by pressing the key.

4

# MENU

7

 
## ACCESSING THE MENU

From the **standby screen**, you can access the following menu options by pressing the **Ⓞ** key (some options may not be available depending on your phone):

<b>Audio</b> <span style="float: right;">7 p. 3</span> Mode Ring tone Key Beeps Msg alert	<b>Services (cont'd)</b> <span style="float: right;">7 p. 7</span> Uncond.CF <span style="float: right;">7 p. 8</span> Call Frwd Speech Data Fax Activated Cancel All Calls <span style="float: right;">7 p. 9</span> Answer Call wait Conceal ID Caller ID? Call Bars <span style="float: right;">7 p. 10</span> Outgoing Incoming Activated Networks <span style="float: right;">7 p. 11</span> SMS-CB Searching Set up <span style="float: right;">7 p. 12</span> Display Languages WelcomeMsg Batt.Save Digital HF
<b>Clock</b> <span style="float: right;">7 p. 4</span> Time/Date Appointmt. Format Update	
<b>Numbers</b> <span style="float: right;">7 p. 5</span> YourNumber Voice Mail Keypad Prefix	
<b>Services</b> <span style="float: right;">7 p. 6</span> Security <span style="float: right;">7 p.7</span> PIN Code PIN2 Code Ntwk Code MENU Code PROD. Code FactorySet Billing Duration Expense	

You can use the **2/▲** key to scroll upwards, and the **8/▼** key to scroll downwards.

How to use the options?

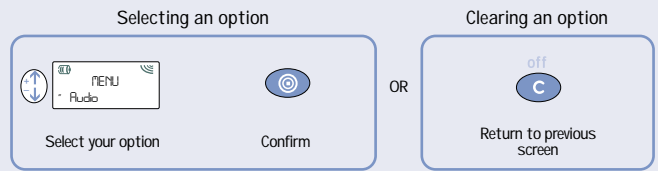

## EXITING THE MENU

 
You can return to the standby screen by pressing the **Ⓞ** key.

## CUSTOMIZING THE MENU

You can make the options that you use most frequently more accessible (up to 9).

For example, you wish to place the "Clock/Appointmt." option before the "Audio" option in the MENU: select this option and press **Ⓞ** (long keypress) to place it in first position.

If you access the MENU again, the following shall be displayed:

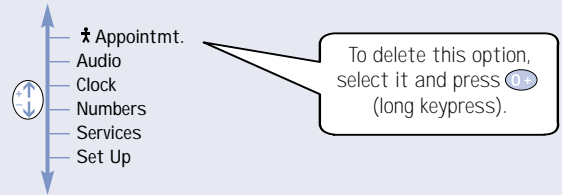

Proceed likewise for any other MENU option.

## Audio

<b>Mode</b>	Depending on the chosen option and connected accessory:
Normal	Normal ring tone (incremental)
Discreet	Normal ring tone (incremental) preceded by several beeps.
Silent	No sound is emitted (ring tone, message or appointment beeps, low battery, etc.). The <b>Ⓞ</b> icon is displayed.
<b>Ring tone</b>	
Melodies	Melodies (use <b>Ⓞ</b> to select it).
Volume	Volume of the ring tone (use the volume control keys <b>Ⓞ</b> to adjust it).
<b>Key Beeps</b>	
Shrt press	When activated, a beep sounds with every SHORT keypress.
Long Press	When activated, a beep sounds with every LONG keypress.
<b>Msg alert</b>	When activated, a beep sounds with every incoming short message.



## Clock

<b>Time/Date</b>	Set the time and date of the phone (use the volume control keys <b>Ⓞ</b> to switch from one to the other).
<b>Appointmt.</b>	Set an appointment (enter the date and time - confirm by <b>Ⓞ</b> - enter the subject of the appointment - confirm by <b>Ⓞ</b> ); when activated, the <b>Ⓞ</b> icon is displayed. Only one appointment can be set at a time. The alarm will sound whether the phone is on or off, pressing any key will switch it off. When this option is activated, deactivation is automatically proposed.
<b>Format</b>	Date and time display format.
<b>Update <sup>(1)</sup></b>	Depending on the terminal and chosen option, the date and time shall be updated by the network:
Automatic	Without any action from the user.
Manual	After the user has confirmed the update.
None	No update other than through the "Clock/Time/Date" option.

 
<sup>(1)</sup> Check the availability of this service with your operator.




## Numbers


- YourNumber** Display your phone number, usually stored in the SIM card (enter the number - confirm by pressing the  key).
- Voice Mail <sup>(1)</sup>** Voice mail number (enter the number - confirm by pressing the  key).
- Keypad** Direct dial numbers: these numbers, once entered, can be dialled from the standby screen only, with a long keypress on keys "1" to "9".

• If no numbers are stored:

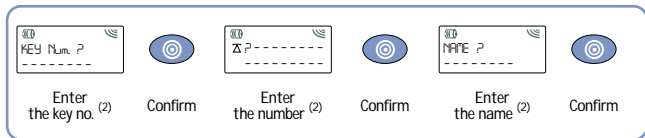

• If a number is stored:

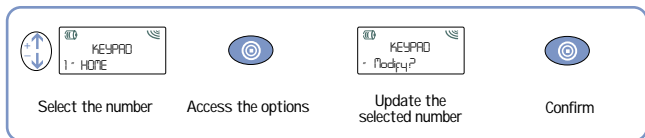 

- Prefix** When activated, the stored number or prefix shall automatically be added to the phone number entered on making the call (enter number - confirm by pressing the  key).





<sup>(1)</sup> Contact operator if necessary before first use.

<sup>(2)</sup> If you make a mistake, you can erase a character by pressing the  key.

5

## Services

### Security


 



 
- PIN Code <sup>(1)</sup>** Protection code for the SIM card, requested every time the phone is switched on WHEN the code is activated.  
*Activate/Cancel* Activate (or cancel) the code.  
*Change* Update the code (4 to 8 digits) after entering the current PIN Code (enter the code and confirm by pressing the  key).
- PIN2 Code <sup>(1)</sup>** Protection code for certain functions on the SIM card (Billing/Expense/Uncond.CF/FDN, etc.) requested upon use WHEN the code is activated.  
*Change* Update the code (4 to 8 digits) after entering the current PIN2 Code (enter the code and confirm by pressing the  key).
- Ntwk Code <sup>(1)</sup>** Password requested for the "Bar" options linked with the network.
- MENU Code** Protection code for certain MENU functions (Services, Set up/Languages) requested upon use WHEN the code is activated.  
*Activate/Cancel* Activate (or cancel) the code.  
*Change* Update the code (4 to 8 digits) after entering the current MENU Code (enter the code and confirm by pressing the  key).
- PROD. Code** Phone protection code, requested every time the phone is switched on and before making any call WHEN the code is activated.  
*Activate/Cancel* Activate (or cancel) the code.  
*Change* Update the code (4 to 8 digits) after entering the current TELEPHONE Code (enter the code and confirm by pressing the  key).
- FactorySet** When activated, the phone will be turned off. When turned back on, all the setting modifications (ringing, display, screen, ...) made after manufacture will be cancelled (option available depending on terminal).

<sup>(1)</sup> Contact operator if necessary.

6

## Services (cont'd)

### Billing



 
 


- Duration** Management of call time.  
*Last call* Duration of the last call.  
*Avail.Dur.* Remaining time available compared to the time under "Incl.time" (for user's information only).  
*Cumul.Dur.* Total duration of calls made.  
*Incl.time* Duration of subscription (enter the time - confirm by pressing the  key).  
*Reset* Reset (immediately or periodically) the total duration of calls made.  
*Durat.Beep* During calls and when option is activated, a beep sounds with a period set by the user (enter the period - confirm by pressing the  key).
- Expense <sup>(1)</sup>** Management of call charges.  
*Last call* Cost of the last charged call.  
*Credit <sup>(1)</sup>* Remaining credit compared to "Set Credit".  
*Cumul.Exp.* Total cost of charged calls.  
*Set Credit <sup>(1)</sup>* Maximum credit beyond which all charged calls are barred (enter credit - confirm by pressing the  key).  
*Reset* Reset the total cost of charged calls.  
*Unit Value* Cost of one Telecom unit in the chosen currency (select the "Change?" option for another currency and press the  key to enter a decimal point).
- Uncond.CF <sup>(1)</sup>** When activated, ALL calls will be automatically forwarded to the entered number (enter the number - confirm by pressing the  key); the  icon is displayed.

<sup>(1)</sup> Check the availability of this service with your operator.

7

## Services (cont'd)

### Call Fwrd <sup>(1)</sup>

- Speech** The following options are available for all calls (voice):  
*Conditnl* When activated <sup>(2)</sup>, calls are forwarded to the entered number if the line is engaged, the call isn't answered or the phone is out of coverage (enter the number and confirm by pressing the  key).  
*If busy* When activated <sup>(2)</sup>, calls are forwarded to the entered number only if the line is busy (enter the number and confirm by pressing the  key).  
*No reply* When activated <sup>(2)</sup>, calls are forwarded to the entered number only if the call isn't answered (enter the number and confirm by pressing the  key).  
*Unreach.* When activated <sup>(2)</sup>, calls are forwarded to the entered number only if the phone is out of coverage (enter the number and confirm by pressing the  key).
- Data** When activated <sup>(2)</sup>, data reception is automatically forwarded to the entered number (enter the number and confirm by pressing the  key).
- Fax** When activated <sup>(2)</sup>, fax reception is automatically forwarded to the entered number (enter the number and confirm by pressing the  key).
- Activated** List of call forwarding activated.
- Cancel all** Cancel all activated call forwarding.



<sup>(1)</sup> Check the availability of this service with your operator.

<sup>(2)</sup> When this option is activated, deactivation is automatically proposed.

8

## Services (cont'd)

### Calls

Answer	Calls are answered:
<i>Auto. Answ.</i>	Automatically (no keypress) after approximately 2 ring tones (option available only if the phone is connected to an accessory).
Key 	After pressing the  key only.
<i>Any key</i>	After pressing any key on the keypad (1 to #).
Call wait <sup>(1)</sup>	When activated, a beep sounds when there is a second incoming call.
Conceal ID <sup>(1)</sup>	When activated, your identity is concealed (number is no longer provided to the recipients).
Caller ID? <sup>(1)</sup>	When activated, the caller's number (or name if stored in the directory) is displayed with every call.

### Call Bars

Outgoing	Certain outgoing calls are barred:
<i>Exc. Dir</i>	When activated <sup>(2)</sup> , all calls to a number not stored in the phone's directory are barred.
<i>All</i> <sup>(1)</sup>	When activated <sup>(2)</sup> , ALL outgoing calls are barred.
<i>Intl.</i> <sup>(1)</sup>	When activated <sup>(2)</sup> , all outgoing international calls are barred.


<sup>(1)</sup> Check the availability of this service with your operator.

<sup>(2)</sup> When this option is activated, deactivation is automatically proposed.

9

## Services (cont'd)

### Call Bars (cont'd)

Outgoing (cont'd)	
<i>Exc. -&gt;Home</i> <sup>(1)</sup>	When activated <sup>(2)</sup> , outgoing calls except those to the subscription country are barred.
<i>Exc. FDN</i> <sup>(1)</sup>	Filter outgoing calls compared to a specific "FDN" directory stored in SIM card.
Activate/Cancel	When activated <sup>(2)</sup> , outgoing calls except those starting with numbers stored in the "FDN" directory are barred.
Change	If the "Exc. FDN" option is activated, the "FDN" directory is updated after entering the PIN2 Code (update by pressing the  key).
Incoming	Certain incoming calls are barred:
<i>Exc. Dir</i>	When activated <sup>(2)</sup> , ALL calls from a number not stored in the phone's directory are barred.
<i>All</i> <sup>(1)</sup>	When activated <sup>(2)</sup> , ALL incoming calls are barred.
<i>If abroad</i> <sup>(1)</sup>	When activated <sup>(2)</sup> , incoming calls from abroad are barred.
Activated	List of call barrings activated.




 
 

<sup>(1)</sup> Check the availability of this service with your operator.

<sup>(2)</sup> When this option is activated, deactivation is automatically proposed.

10

## Services (cont'd)

### Networks



SMS-CB <sup>(1)</sup>	Messages broadcast over the network (weather, traffic, etc.) are automatically displayed on the standby screen (scroll messages using the volume control keys  , delete them by pressing the  key).
<i>CB list</i>	List of network codes used to monitor the broadcast messages (update the list by pressing the  key).
<i>Reception</i>	Depending on the selected option, the phone selects broadcast messages:
Full	Phone permanently scans the network and displays all the received messages.
Limited	Phone intermittently scans the network and displays certain messages.
None	No messages (option recommended to save the battery).
Searching	Search for a home network.
<i>Available</i>	Networks available in the radio environment.
<i>SearchMode</i>	Depending on the selected option, search mode is:
Automatic	First searched network is the last one used.
Manual	User chooses the network (  is displayed next to the network name), from the list of available networks.
<i>Preferred</i>	List of networks for priority connection (update the list by pressing the  key).
<i>Forbidden</i>	List of forbidden networks (update the list by pressing the  key).

<sup>(1)</sup> Check the availability of this service with your operator.


11

## Set Up

### Display

Backlight	Backlighting intensity (use  to adjust it): we recommend minimal intensity to save the battery.
Contrast	Contrast of the display (use  to adjust it).


### Languages

Message display language (use  to select it). "Automatic" option selects the language corresponding to the subscribed network (if available in the terminal).

### WelcomeMsg <sup>(1)</sup>

A welcoming message is displayed every time the phone is switched on: up to 24 characters (see the available characters in the "Directory" paragraph).

### Batt. Save

Power off	When activated, the phone is automatically switched off if it is not used for a period of time (no keypress, no calls, no incoming message) chosen by the user (enter the duration - confirm by pressing the  key).
LED	When activated, the LED indicator shall be inhibited to save the battery.

### Digital HF <sup>(1)</sup>

Key alarm	When activated, a beep sounds when the car key is removed and the phone is left in the digital car kit.
TheftAlarm	Digital car kit theft alarm code.
Activate/Cancel	Activate (or cancel) the code.
Change	Update the code (4 digits) after keying in the current Theft Alarm Code.

<sup>(1)</sup> Option available depending on terminal.

12

# CONTENTS

<b>OVERVIEW OF THE PHONE</b> .....	<b>①</b>
• Keys .....	1-2
• Icons .....	1-3
• LED Indicator .....	1-4
<b>INSTALLATION</b> .....	<b>②</b>
• Safety and precautions .....	2-1
• Getting started .....	2-3
<b>CALLS</b> .....	<b>③</b>
• Making a call .....	3-1
• Receiving a call .....	3-2
• Displaying your number .....	3-2
• While communicating, you can also.....	3-3
<b>DIRECTORY</b> .....	<b>④</b>
• Accessing the directory .....	4-1
• Exiting your directory .....	4-3
• Managing your directory .....	4-4
<b>CALL MEMORY</b> .....	<b>⑤</b>
• Accessing the call memory .....	5-1
• Exiting the call memory .....	5-1
• Managing/clearing the call memory .....	5-2
<b>VOICE MAIL</b> .....	<b>⑤</b>
<b>€ CONVERSION / SAVING A NUMBER</b> .....	<b>⑤</b>
<b>SHORT MESSAGES</b> .....	<b>⑥</b>
• Reading your short messages .....	6-1
• Handling your short messages .....	6-3
• Call back.....	6-4
• Exiting your short messages .....	6-4
<b>MENU</b> .....	<b>⑦</b>
• Accessing the Menu.....	7-1
• Exiting the Menu.....	7-2
• Customizing the Menu.....	7-2

## WARRANTY/INFORMATION

### WARRANTY

We would like to congratulate you for choosing this mobile phone and we hope that this product will satisfy all your needs.

We would like to remind you that this mobile phone has been approved in accordance with European regulations, certified by the CE marking.

Notwithstanding any other applicable statutory warranties, this mobile phone is guaranteed for parts and workmanship for a period of ONE (1) year, from the date of purchase shown on your invoice. Nonetheless, if the statutory warranty in force in your country exceeds TWELVE (12) months, the statutory warranty will apply in place of the manufacturer's warranty. However, if the statutory warranty does not exceed TWELVE (12) months, the total warranty period (statutory and contractual) shall be TWELVE (12) months.

The warranty for the batteries, different from that of the phone, is stated in the "Recommendations" leaflet.

This warranty shall not, however, apply in the case of use not conforming with the User's Manual, or in the case of defects due to external causes, in particular humidity or liquid infiltration, or in the case of improper installation, repair or modification performed by parties not authorized by the manufacturer or dealer.

In case of defect, return your mobile phone to your dealer.

### INFORMATION

- **Internet address:** [www.alcatel.com](http://www.alcatel.com)
- **Alcatel Hot Line no.:** See "Alcatel Services" leaflet (call charged according to rates applicable in caller's country).