

Nokia 105



Issue 1.0 EN

Psst...

For info on Nokia Service terms and Privacy policy, go to www.nokia.com/privacy.

Contents

Psst...	2
Safety	4
Get started	6
Basics	14
People & messaging	19
Entertainment	23
Office	24
After-sales policy	25
Product and safety information	27

Safety

Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide.



SWITCH OFF IN RESTRICTED AREAS

Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all

instructions in restricted areas.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



BATTERIES, CHARGERS, AND OTHER ACCESSORIES

Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products.



KEEP YOUR DEVICE DRY

Your device is not water-resistant. Keep it dry.

 


PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.


Get started

Keys and parts

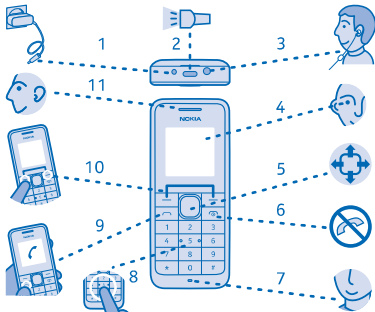


-
- 1 Charger connector
 - 2 Flashlight
 - 3 Headset connector
(3.5 mm)
 - 4 Screen
 - 5 Scroll key
 - 6 End/Power key
 - 7 Microphone
 - 8 Keypad
 - 9 Call key
 - 10 Selection keys
 - 11 Earpiece

 Insert the SIM card and battery

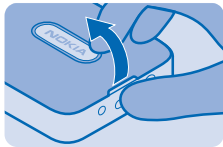

 
1. Switch the phone off, and remove the back cover.

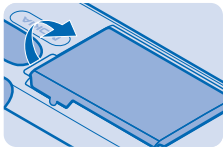

2. If the battery is in the phone, lift it out.



 
3. Slide the SIM under the holder with the contact area face down.

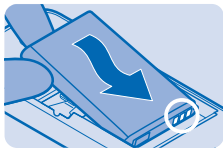


4. Line up the battery contacts, and push the battery in.




 5. Press the back cover down until it locks into place.

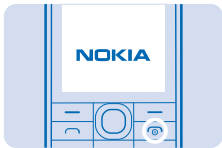


6. To switch on, press and hold  until the phone vibrates.

 Charge the battery

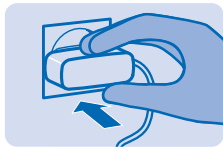


 1. Plug the charger into a wall outlet.

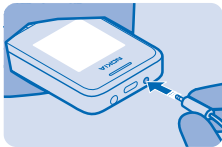

2. Connect the charger to the phone. See 5 on page 26. When done, unplug the charger from the phone, then from the wall outlet.

 Switch your phone on

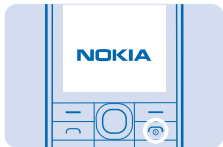

1. Press and hold the power key.



2. To set the time, press up or down. Press **OK**.



3. To set the date, press up or down. Press **OK**.
Your phone is now ready.

Lock the keys



Lock the keys when not using your phone.

 


1. Select **Menu**, and press *****.



2. To unlock, select **Unlock**, and press *****.


Change the volume

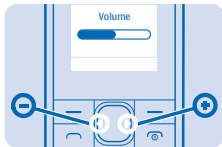

1. Scroll left or right to change the volume.



 
2. You can also connect a compatible headset or other device to the headset connector.

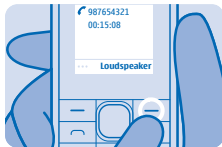

3. To use the loudspeaker on your phone when calling, select **Loudspeaker**. You can also use the loudspeaker when listening to radio.

Basics

 Explore your phone

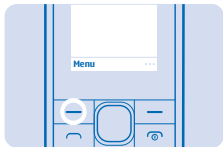

1. To see the apps and features of your phone, press **Menu**.



 
2. To go to an app or feature, press the scroll key up, down, left, or right.



3. To open the app or select the feature, press **Select**.



4. To go back to the previous view, press **Back**.

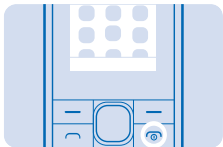

5. To go back to the home screen, press .



6. To use the flashlight, press the scroll key up twice. To switch off, press up once. Do not shine the light in anyone's eyes.

Write text

Press a key repeatedly until the letter is shown.

Type in a space

Press 0.

Type in a special character or punctuation mark

Press and hold *.

Switch between character cases

Press # repeatedly.

Type in a number

Press and hold #. To go back to letter mode, press and hold #.

Use predictive text

1. Select **Options > Dictionary** and the language.
2. Start writing a word. When the word you want is shown, press **0**.

Change a word

Press ***** repeatedly until the word you want is shown.

Add a new word to the dictionary

If the word you want isn't in the dictionary, write the word, select **Spell**, and type in the word.

 
Switch between predictive and traditional text

Press **#** repeatedly.


Switch predictive text off

Select **Options > Dictionary > Dictionary off**.


Change the ringtone

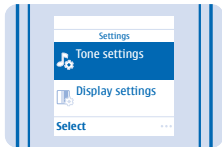

 1. Select **Menu > Settings > Tone settings**.

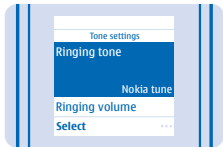

 2. Select **Ringing tone**.

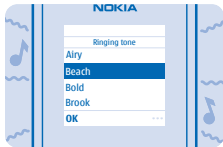


3. Pick a ringtone, and select **OK**.

★ **Tip:** To switch quickly to silent profile, press and hold #.

 
People & messaging

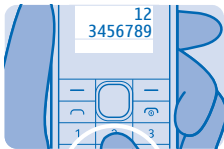

Make or answer a call




 1. Type in the phone number.

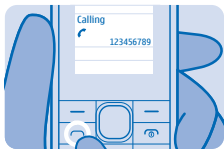To type in the + character, used for international calls, press * twice.



 2. Press  to make the call. To end the call, press .

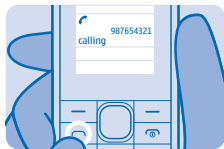


3. When someone calls you, press  to answer.


Save a name and phone number



 1. Press **Menu**, and select **Contacts**.

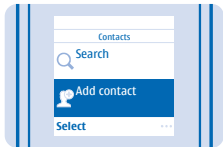

 2. Select **Add contact**.

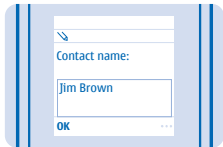

3. Write the name, and press **OK**, then type in the number, and press **OK**.

Save numbers in five separate phonebooks

1. Press **Menu**, and select **Contacts > Settings**.
2. To use the phone memory, select **Memory in use > Phone**.
3. Select **Multi-Phonebook > Phonebook style > Multi-Phonebook**.
4. To add a contact to a phonebook, press **Menu**, and select **Contacts > Settings**.

5. Select **Multi-Phonebook > Manage contacts**.

6. Select a contact, and mark a phonebook.
7. Press **Done**, and save the changes.

Select which phonebook to use

Select **Multi-Phonebook > Current phonebook** and the phonebook you want to use.

Rename a phonebook

Select **Multi-Phonebook > Rename phonebooks** and the phonebook, write the name, and press **OK**.

Send and receive messages

 
1. Select **Menu > Messages**.
2. Select **Create message**.
3. Write your message.
4. Select **Options > Send**.
5. Type in a phone number, and select **OK**. Your message is sent.
6. To read a received message, select **Show** on the home screen.
7. To read the rest of the message, press down.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that


can be sent in a single message.

Entertainment


Listen to the radio

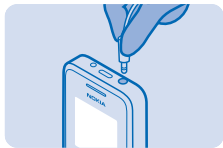

 1. Connect a headset, and select **Menu > Radio**. The headset cable works as the radio antenna.

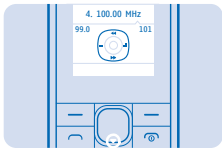

 
2. To go to the next channel, press down.

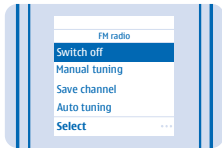


3. To close the radio, press **Options**, and select **Switch off**.

Office

 Set an alarm

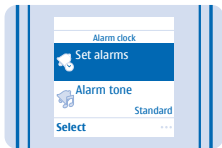

 1. Select **Menu > Clock > Set alarms**.

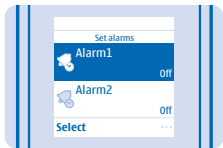

2. Select an alarm.

★ **Tip:** You can set up to five different alarms.



3. To set the hour, press up or down. To set the minutes, press right and then up or down. Press **OK**.

After-sales policy



Need assistance after you've bought your phone?



Contact the store where you bought it for help and advice.

Feature-specific information

1 The images in this guide may differ from your device screen.

2 The antenna area is highlighted.

3 Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

4 **⚠ Important:** This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or

the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout.



5 If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made.

6 You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service

provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

7 Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Product and safety information

Network services and costs

You can only use your device on the GSM 900, 1800 networks. You need a subscription with a service provider.

You may also need to subscribe to some features.

Emergency calls

1. Make sure the device is switched on.
2. Check for adequate signal strength.

You may also need to do the following:

- Put a SIM card in the device.
- Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group.
- If the device keys are locked, unlock them.

3. Press the end key repeatedly, until the home screen is shown.
4. Type in the official emergency number for your present location. Emergency call numbers vary by location.
5. Press the call key.
6. Give the necessary info as accurately as possible. Do not

end the call until given permission to do so.

When you switch your device on for the first time, you are asked to create your Nokia account. To make an emergency call during the account setup, press the call key.

📞 Important: Activate both cellular and internet calls, if your phone supports internet calls. The phone may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely

on any wireless phone for essential communications like medical emergencies.

Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and let the device dry.

- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and

violate regulations governing radio devices.

- Do not drop, knock, or shake the device. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- For optimal performance, switch the device off and remove the battery from time to time.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two

separate places, such as your device, memory card, or computer, or write down important info.

Recycle



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check how to recycle your Nokia

products at www.nokia.com/recycle.
Crossed-out wheeled-bin symbol



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check

with your local waste authority, or go to www.nokia.com/support. For more info on the environmental attributes of your device, see www.nokia.com/ecoprofile.

Battery and charger info

Use your device only with an original BL-5CB rechargeable battery. Nokia may make additional battery models available for this device. Charge your device with AC-11 charger. Charger plug type may vary. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and

standby times are noticeably shorter than normal, replace the battery.

Battery safety

Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the

battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode.

Obey local regulations.

Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way.

If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush

the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.

Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre

before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

Additional safety information

Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices'

function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.

- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing

▲ Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

Nickel

The surface of this device is nickel-free.

Operating environment

This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5

centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

The sending of data files or messages requires a quality network connection and may be delayed until such a connection is available. Follow the separation distance instructions until the sending is completed.

Vehicles

Radio signals may affect improperly installed or

inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or

accessories in the air bag deployment area.

Potentially explosive environments

Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine

off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio

waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions

with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.48 W/kg. Use of device accessories may result in different SAR values. SAR

values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Nokia support messages

To help you take maximum advantage of your phone and services, you receive free customised text messages from Nokia. The messages contain tips and tricks and support.

To stop receiving the messages, select **Menu**.

To provide the service described above, your mobile

phone number, the serial number of your phone, and some identifiers of the mobile subscription are sent to Nokia when you use the phone for the first time. Some or all information may also be sent to Nokia when updating software. This information may be used as specified in the privacy policy, available at www.nokia.com.

Copyrights and other notices

DECLARATION OF CONFORMITY

CE 0168

Hereby, NOKIA CORPORATION declares that this RM-908 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.nokia.com/global/declaration/declaration-of-conformity.

The availability of products, features, apps and services may vary by region. For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export

laws and regulations from the US and other countries.

Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the

products described in this document without prior notice.

Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local Nokia dealer for further details and availability of language options. TM © 2013 Nokia. All rights reserved. Third party product/ names may be TM of respective owner.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses,

may be obtained from MPEG
LA, LLC. See
www.mpegla.com.