

© 1999 Philips Consumer Communications  
Division of Philips France  
All rights reserved  
Printed in France



4311 256 00312



## User manual
















 







*Let's make things better.*



**PHILIPS**

 

## QUICK GUIDE

<p><b>SWITCH ON</b> Press and hold</p> 	<p><b>ADD A NAME</b></p>  Network	<p><b>ACCESS TO MENU</b> Enter or exit the menus.</p>  MENU
<p>Enter PIN: —</p>  <p>Enter your PIN code.</p> 	<p>Enter phone number.</p>  1234_	<p><b>NAVIGATION</b></p> 
<p><b>MAKE A CALL</b></p>  <p>Enter phone number.</p>  <p>Call the number (e.g.: 112 for emergency see p. 9)</p>	<p>1234_</p>  1234_ Store no.	<p>Move Up or Back.</p>  <p>Move Right.</p>  <p>Move Left.</p>  <p>Move Down or Forward or Validate.</p> 
<p><b>ANSWER A CALL</b></p>  12345678	<p>Enter name</p>  <p>Enter name</p>  Name : —	<p><b>SWITCH OFF</b></p>  <p>Press and hold.</p>
<p><b>END A CALL</b></p>  <p>End.</p>	<p>If number is OK</p>  Number : 1234_	<p><i>When your phone is switched off, you cannot receive calls.</i></p> 
<p>For Voice dial options (see page 13)</p>		

# MENU MAP

MENU	FORWARDING	MESSAGES	NAMES	CALLS	EXTRA	SETTINGS	SECURITY
<b>Forwarding</b>	Always	Status	◀ If no reply ▶	If busy	Unreachable	Cancel all	
<b>Messages</b>	Centre no.	Archive	◀ Send ▶	Usual msg.	Forwarding		
<b>Names</b>	Search	◀ View ▶	Add	Own number			
<b>Calls</b>	Delete all	◀ View ▶	Meters				
<b>Extra</b>	Stopwatch	Clock	◀ Alarm clock ▶	Calculator	BioCalendar	Converter	
<b>Settings</b>	Register	Key tones	◀ Ringer ▶	Voicemail	Box number	Broadcast	
<b>Security</b>	Change PIN2	Change PIN	◀ PIN code ▶	Fixed names	Restriction		



## GLOSSARY

<b>DTMF</b>	Dual Tone Multi Frequency The tones are transmitted by the phone to the network. They are used to interrogate answering machines, transmit codes,...
<b>GSM Network</b>	Global System for Mobile communications. The type of phone network used by your phone.
<b>PIN Code</b>	Personnal Identification Number, this is the secret code of the SIM Card. If you, or someone else, enters the wrong PIN code three times your SIM card is blocked. <b>If this happens, please contact your service provider.</b>
<b>PIN2 Code</b>	Secret code that allows you to access certain SIM card dependent features. If you, or someone else, enters the wrong PIN2 code three times your SIM card is blocked. <b>If this happens, please contact your service provider.</b>
<b>PUK Code</b>	Secret code used to unblock your SIM card if you, or someone else, enters the wrong PIN code three times. <b>This code will be given to you by your service provider.</b>
<b>Roaming</b>	Using your phone in a network other than your home network in your country or abroad.
<b>SIM card</b>	Subscriber Identification Module. This card which is provided by your GSM service provider allows you to make phone calls with your GSM phone. Your phone number is contained inside the card.
<b>SMS</b>	Short Messages Service. This service provided by the operator allows you to send and receive short written messages (Maximum : 160 characters).


## BEFORE YOU START

From your card, remove the micro-SIM card

### **The micro-SIM card**


To use your phone, you must insert a valid micro-SIM card supplied by your GSM network operator. When you switch the phone on, it may ask for the PIN code. The PIN code is the secret code of the micro-SIM card.

The micro-SIM card contains your subscription number and phone number. It also contains a memory in which you can store phone numbers and messages. If you use your micro-SIM card on another phone, you still retain the same phone number, stored numbers, and messages.

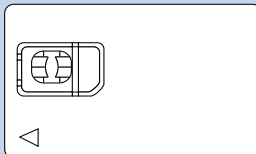

### **The battery**


Your phone is powered by a rechargeable battery.

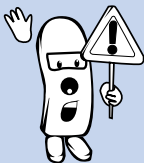

- After you plug in the battery, please wait a few seconds before pressing the on/off key to switch the phone on.
- A battery only reaches its maximum capacity after being totally discharged and recharged 2 or 3 times.
- A battery lasts longer if you allow it to fully discharge from time to time.
- If you do not use your phone for several days, it is better to remove the battery.


### **Remove the battery cover**

Press on the latch on the back of the phone and lift off the battery cover.

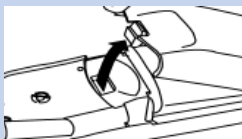

### **Remove the battery (if necessary)**


Lift up on the bottom of the battery and remove it from the phone.

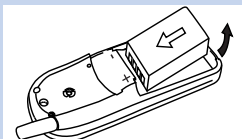

## BEFORE YOU START


### Insert the micro-SIM card

First, place the micro-SIM card into the appropriate slot in the battery compartment (the clipped corner should be at the top left). Then, slide the card with your finger until it stops.

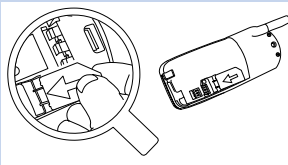

### Insert the battery

1. Keep the battery + and - on the top facing the + and - of the phone.
2. Slide the battery onto the contacts points and press.

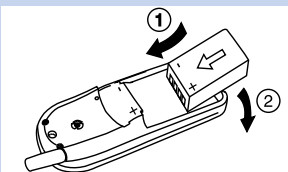


### Replace the battery cover

Hook the battery cover onto the hinges on bottom of phone and press forward until the latch catches.



### Charge the battery

With the battery inserted in the phone, plug the connector into the right socket at the base of the phone. Next, plug the transformer unit into an AC power socket.

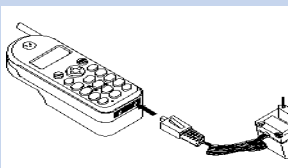

The only way to turn off the charger is to unplug it, so use an easily accessible AC power socket.

The battery icon on your phone's display indicates the state of the charge process:

- Bars moving = battery is charging.
- Bars steady = battery is fully charged.
- Battery outline flashing (see Troubleshooting p. 32).

You can switch the phone on and use it during charging.



*The first time you charge the battery and later, if it is completely discharged, the battery icon will only appear 2 to 3 minutes after you connect the charger. Please charge the phone for a minimum of 3 hours before first use.*

## DISCOVER YOUR PHONE

**"Compass" key**  
use this key to navigate in the menus, the OK key is used to validate information

**Earpiece**  
listen here

**Antenna**

**Display**  
see next page

**Green "CALL" key**  
press this key to dial the number or name on the display, or use it to answer a call


**Red "ON/OFF" key**  
a long press on this key switches the phone on/off, a short press ends a call


**"CLEAR" key**  
to delete numbers and letters on the display

**MENU key**  
to enter and exit the menus

**Keypad**  
to enter numbers and text

**Microphone**

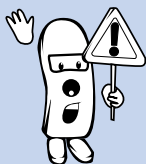

If you encounter the  symbol in this manual, it means that you have to press and hold the key to activate the function.

## DISPLAY

**New text message(s)**  
- if on: you received new messages  
- if flashing: the memory is full, you need to delete old messages before you can receive new ones

**Silent mode**  
if on: phone will not ring or beep (except for the alarm clock)

**Network**  
if on: your phone is registered to a network  
if flashing: registration is in progress

**Battery level**  
the bars indicate the battery level (4 bars is full, no bars means recharging is needed)

**New voicemail**  
if on: there are new messages waiting in your voicemailbox (\*)

**Roaming**  
your phone is registered to a foreign network

**Reception quality**  
the more bars are shown the better the reception

**Graphics area**  
displays the clock and guides you through the menu

**Arrows**  
indicate in which directions you can go using the Compass key

**Cursor**  
indicates that you can enter numbers or text




**2 text lines**  
to enter numbers and text or to read text messages













(\*) Depending on the network.

 


## ENTERING TEXT



Each key allows you to obtain several characters. You have to quickly press the same key several times to reach the desired character.





	TO OBTAIN	Space	D	ü
<b>Example:</b>	PRESS	 Once	 Once	 Five times quickly

Key	Characters
	space 1 @ # = < > ( ) & £ \$ ¥
	a b c 2 à ä å æ ç
	d e f 3 é è Δ Φ
	g h i 4 Γ ì
	j k l 5 Λ
	m n o 6 ñ ò ö ø
	p q r s 7 β Π Θ Σ
	t u v 8 ü ù
	w x y z 9 Ω Ξ Ψ
	. 0 " ' ? ! , ; i ï
	* + - / %
	<b>upper-case lower-case mode</b>



While you enter text your phone changes between upper-case and lower-case automatically.

If you wish to enter text in the upper-case mode press , to enter text in the lower-case mode press  again.


The   icons will show that you are in the upper-case mode. In the lower-case mode the   icons appear.

## BASIC FUNCTIONS

### Switch on/off...

**SWITCH ON**


**Press and hold.**



Enter PIN:


—

Sometimes entering the PIN code is not necessary (depends on your subscription and on your PIN request settings - see page 24).




Enter your PIN code.


The digits entered are replaced by big dots.



If you enter a wrong code 3 times your card will be blocked. If this happens, contact your operator.




PIN correct



...

If this is the phone's initial use or if the battery has been removed since the last use, you will need to re-set the clock




Registering


Network

**SWITCH OFF**

**Press and hold.**




Goodbye




### Voice dialling

You can also make a call by pronouncing the voice tag you have associated to a number (see p. 13).



**Press and hold**

Speak now



Pronounce the name you have associated to the number. The phone dials automatically the number.

### Make a call

Network

Enter phone number

01456...

Call the number

Calling

0145678901


Black Jack

00:02

Display shows a call cost if sent by your network.

 
The name will be displayed only if the name is stored in your phone's Names list.

END CALL



## BASIC FUNCTIONS

### Answer or reject a call



The caller number is displayed only if your subscription supports caller line identification. If the number is in your Names list, the name will appear instead.




Accept the call  
or




Reject the call.

### Earpiece volume

 
While on a call you can adjust the earpiece volume.



Raise earpiece volume.  
OR

 

Lower earpiece volume.

 


### Consult last calls

Your phone automatically stores a list of the last 10 calls you dialed and the last 10 callers who dialed you (including missed calls).



 Display the last call made, received or missed.



To view other calls.




To call.




For information on viewing the last 20 calls you placed or received, see "Calls Section" p. 20.

### Adjust ringer volume and vibrator

 You can select the vibrator options and adjust or turn off the ringer volume



Display ringer volume selection.

 

Silent ♦ Vibrator ♦ Vibra-ring ♦  
Low ♦ Medium ♦ High



 
Select the volume.



OR




Select vibrator mode




Validate vibrator or volume selection.


## BASIC FUNCTIONS

### Emergency call




Enter 112




	Calling
	112

Depending on your network operator, the emergency number 112 can be dialled without the micro-SIM card inserted.




### Change language


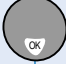
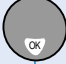
Normally your phone automatically selects the right language for your country, but in case you want to change it:



Press and hold.


	Language
	English ▶


Select language.






### International call


To make an international call, you can use "+" as the international prefix.




	Network
---	---------




Press and hold.

	+_
---	----

Dial the number (international country code and local number).





Call the number.

	Calling
	+831234567


### Keypad lock/unlock


Avoid undesired keystrokes when the phone is in your pocket or purse.


	Network
---	---------




Press and hold to lock keypad.

	Keypad is locked
---	------------------


	Network
---	---------



Press and hold to unlock keypad.

	Keypad is unlocked
--	--------------------


When the keypad is locked, it is possible to dial the emergency number and to receive calls.






## SPECIAL FUNCTIONS

### Answer a second call (Call Waiting)


*This feature depends on the network. If a second person calls you, you will hear a beep. Check the display for a second call.*





	II	◀ Rob	█
Waiting			


 **Reject second call**  
**OR**  
 **Accept second call**

**Call 1 is put on hold.**


	II	◀ Rob	█
00:02			

 **Switch between Call 1 and Call 2.**

	I Kim	↔	II Rob
---	-------	---	--------


 **To end the call on display and return to other call.**

**Return to single call state.**


	Kim		
01:16			


### Automatic redial


**When you dial a number and your correspondent is busy, your phone offers the function of automatically redialling.**

	Failed
---	--------


**Call failed or recipient is busy.**

	0123456789
Autoredial?	

 **Confirm.**  
**OR**  
**Any other key cancels autoredial.**

	0123456789
---	------------

**A beep will sound for each redial attempt or vibrate 5 seconds in both vibrator modes**


	0123456789
00:01	


**A beep informs you when the connection has been made.**  
**An incoming call or any use of the phone will end automatic redial.**


### Scratchpad

**The scratchpad feature is useful if you want to store a telephone number during a call.**


**The number can be dialled or viewed later.**

	0123456789
05:12	


 **Enter the number you want to keep.**



	67890123_
---	-----------


**The display automatically returns to your call.**

	0123456789
12:15	

**End the call.**

	67890123_
---	-----------

 **Call the number on the scratchpad.**  
**OR**  
 **For options.**

	67890123
◀ Store no. █	

## SPECIAL FUNCTIONS

### Touchtones (DTMF)

During a call or in direct dialling, the numeric keys always transmit DTMF tones (Dual Tone Multi Frequency) also known as "touchtones".

These tones are used to operate services that you can reach with your phone, like a pager or an answering machine.

Example, to consult your home answering machine:



Enter telephone number of your home answering machine.

	0123456789_
	,



Enter a "wait" signal to give time for the phone to connect.

	0123456789w_
--	--------------



Enter the password of your home answering machine (e.g.: code: 9876).

### Hide your identity



Enter "pause" character.

	0123456789w9
	876p_



Enter code to listen to new message (e.g.: code 3).

	0123456789w
	876p3_



Call.

### Hide your identity

If you type #31# followed by the phone number you call, your phone number is hidden to the other person.

	#31#0123456
	78_



Availability of this feature depends on your network.

### Setting up Flash Dial

You can associate 8 names in the Names list or FDN list with keys 2-9 on the keypad. A long press on one of these keys will automatically dial the the associated number.

	Names
	◀ Vincent ▶

Choose the name you want to make Flash Dial.



Press and hold to link the name to key 4.

### CANCEL FLASH DIAL

	Names
	◀ Vincent ▶



Press and hold to cancel link.

### TO FLASH DIAL

	Network
--	---------




Press and hold to dial linked number.

# MENUS

## Discover the Compass Key

The Compass Key is your navigator while in the menus.

Press  to enter or exit the menus.













Move one menu-level back.

Switches to option on the left.  Switches to option on the right.

Move forward or validate the displayed option.

Here's an example:

What you see on the display    Press this key    The Names list menu options

 Network		MENU
 Menu ◀ Names ▶		Messages    Names    Calls
 Names ◀ View ▶		Search    View    Add
 Names ◀ Anders ▶		Zara    Anders    Barbara
 012345		012345_
 Anders ◀ Send msg. ▶		Delete    Send msg.    Usual msg.

## MENUS / NAMES...

### Add a name

With your phone, you can store the names and phone numbers of people you call frequently.

**MENU**

Menu  
Names

OK

Names  
View

OK

Switch to "Add".

Names  
Add

OK

Accept.

Name:  
\_

OK

Enter name (max 11 characters).

For example: Jim

J I M

5 4 6  
JKL GHI MNO

Once Three times quickly Once

...

### Add Voice Dial

**C**

Delete one character.

OK

OR

Press and hold to delete all characters.

OK

Name:  
Jim\_

OK

Number:  
\_

OK

Enter number (20 digits max).

OK

Number:  
0123456789\_

OK

Accept number.

### NO VOICE DIAL

Voice dial  
Yes

OK

Select "No"

OK

TO ADD VOICE DIAL

OK

Press OK and speak

OK

Pronounce the voice tag you want to associate to the number

OK

Press OK and speak

OK

Repeat the voice tag you want to associate to the name

OK

Stored

When Voice dial memory is full (10 names) the Voice dial menu disappears



## MENUS / NAMES...

### View names in the Names list

**MENU**

Menu  
◀ Names ▶

**Accept.**

Names  
◀ View ▶

**Accept.**

Names  
| Adam ▶

**To scroll through the list.**

**OR**

**Use the keypad to quickly jump to a name.**

For example:

**Press to jump to names starting with "P", "Q", "R" or "S".**

**7**  
PQRS

Names  
◀ Philippe ▶

**Press to jump to next name.**

Names  
◀ Rozenn ▶

**Call the number.**

**OR**

**To view the number.**

0123456789

**To view the available options.**

### Quick access to names..

Zara  
◀ Send msg. ▶

Delete ◊ Send msg ◊ Usual msg ◊  
Voice dial ◊ Change |

**Switch to the option you want.**

**Accept.**

**Quick access to names**

**There is a quick way to access the names you stored:**

Network

**Names :**  
| Anders ▶

**Switch to other names.**

**Call.**

## MENUS / NAMES...

### Search for a specific name

MENU

Menu  
Names

Accept.

Names  
View

Switch to "Search".

Accept.

**Example:**

Search for:  
Ur\_

Enter first few letters of name

U R

8 TUV 7 PQRS

Twice quickly Three times quickly

Names  
Urszula

Call name on display.

### Read your own phone number

MENU

Menu  
Names

Switch to "Own number".

Names  
Own number

Accept.

Own number  
0123456789

*Only available if present in the SIM card.*

### Delete a name

To access directly to phonebook

Names  
Axel

Select name you want to delete

Names  
Xavier

"Accept twice"

Xavier  
Send msg.

Go to delete

Press C to delete

Deleted


## MENUS / MESSAGES..

### Messages

With your GSM phone you can receive text messages (SMS) and send messages to other GSM phones.

To have the possibility of writing and sending messages, you need to enter a service center number first.

If it is not present in the SIM card, ask your network operator for it.

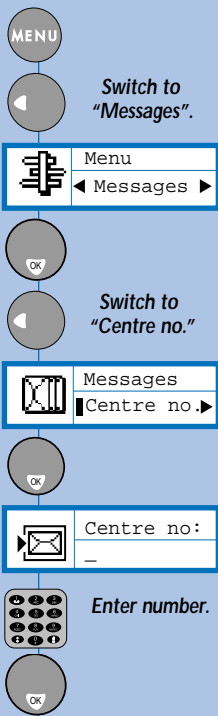

MENU

Switch to "Messages".

Menu  
Messages

OK

Switch to "Centre no."

Messages  
Centre no.

OK

Centre no:  
\_


Enter number.


OK

### New message(s)


Your phone allows you to send or receive short written messages.

#### NEW MESSAGE INDICATORS

 Lights up on the display when you receive a text message.

 Flashes when the message memory is full. If this happens, you need to delete archived messages otherwise new ones will be rejected.

#### READ NEW MESSAGE(S)

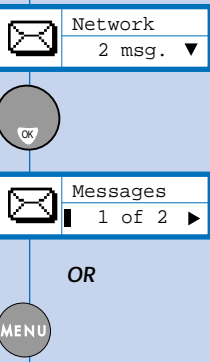

Network  
2 msg. ▾


OK

Messages  
1 of 2 ▶

OR

MENU

...

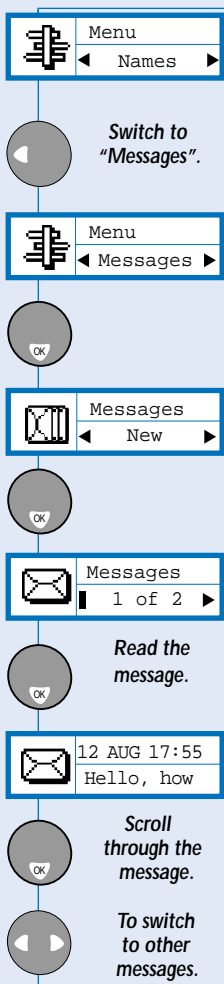

Menu  
Names ▶

Switch to "Messages".

Menu  
Messages ▶

OK

Messages  
New ▶

OK

Messages  
1 of 2 ▶

Read the message.

OK

12 AUG 17:55  
Hello, how

Scroll through the message.

OK

To switch to other messages.

◀ ▶

## MENUS / MESSAGES...

...

**At the end of a message.**


Reply

Delete Reply Forward

**Switch to the option you want.**

**Accept.**

*When you receive a text message that comprises a telephone number enclosed between double quotes (e.g.: "+33900112233"), then the number is automatically extracted and stored in your calls list so that you can call it back easily.*



**Read archived messages**

Messages you have read and messages you have saved can be found in the Archive.

MENU

Switch to "Messages".

Menu Messages

OK

Switch to "Archives".

Messages Archive

OK

Messages 1 of 3

Switch to the message you want to read.

OK

Read the message.

OK

Switch to other messages

**Send short messages (SMS)**

Menu Messages

OK

Messages Send

OK

Accept

Enter phone number or select a name from the phonebook by pressing OK a second time.

To number: 0123\_

OK

Text: -

OK

Enter message (maximum 160 characters). See "Entering Text" section for instructions.

## MENUS / MESSAGES..

...
Emotion Icons
...

Icons  
 None

Select the icon you want to send. (See "Emotion Icons" table at the end of this procedure). If you do not want to send an icon, choose "None".

◀

▶

Select icon

OK

Validate.

Send  
 Yes

No ♦ Yes

Decide to send or not.

OK

Requesting

Wait while message is being sent.  
Confirmation will appear.

Sent

Save  
 Yes

No ♦ Yes

Decide to save or not.  
To see the icon the receiver needs a Philips Savvy™ phone, otherwise the equivalent code will be displayed at the end of the receiver's message.

Emotion Icons


Icon	Code sent	
	:-)	
	:~)	
	B-)	
	:-P	
	:-(	
	:-/	
	:<*	
	:>#	
	8<)	

	Magic	=:l
	Love	(O)
	Broken	(X)
	Yo!	Yo!
	Well done	==b
	Party	o<l
	Hooray!	iii
	Flowers	@>
	Drink	>-l
	Coffee	ID
	Cloudy	:::
	Sunny	>o<
	Holidays	-Y-
	Ball	(l)
	BOOM!	>*<
	Deadly	%-l


## MENUS / MESSAGES...

### Send SMS from phonebook


You can also send an SMS directly from your phonebook without having to enter the phone number.

 Network
 

OK


 Names: Anders
 

OK


 Names: Sebastian
 

OK

Accept twice

 Sebastian: Send msg.
 

OK


 Text:
 

OK

Enter message (maximum 160 characters). See "Send short messages (SMS)" for more instructions.


OK

OR

 Menu: Messages
 


OK

Accept twice

 To number:
 


OK

You have direct access to the phonebook




OK

Select the name



OK

Accept twice.

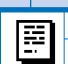 Text:
 

OK


Enter message (maximum 160 characters). See "Send short messages (SMS)" for more instructions.

OK

### Usual Messages


Your phone contains a number of pre-defined text messages like: "Please call me back", "I will be late", "I will call you back", etc.

From Messages switch to "Usual msg."

 Messages: Usual msg.
 


OK

Accept

 Usual msg.: Please call
 


OK

Switch to the desired message.




OK

Accept

 To number:
 


OK

Enter number.




OK

Accept

 Please call me back\_
 

OK

Change text (if wished).



OK

Accept.

## MENUS / CALLS...

### View calls...

You can consult the last 20 calls in the Calls list.

MENU

Switch to "Calls".

Menu  
Calls

Accept

Calls  
View

The Icon indicates the type of call.

- Phone number you dialed.
- Phone number of answered call.
- Phone number of call you missed.
- Phone number extracted from an SMS message.

...

Calls  
Barbara

To view other calls.

To call

OR

To view the number.

0123456789

To options.

Barbara  
Store no.

Delete Store no  
Send msg. Usual msg.

Choose other option if you wish.

Confirm selection.

### Delete all calls

You can delete all the calls in the calls list.

MENU

Switch to "Calls".

Menu  
Calls

Accept.

Calls  
View

Switch to "Delete All".

Calls  
Delete all

Accept.

Press C to delete

You must confirm the deletion.

C To delete.

 
Deleted

## MENUS / CALLS...


### Meters

Your phone has meters that allow you to see the total cost of your calls.

It also allows you to set limits on cost and check your consumption.





Switch to "Meters".

 

The cost counters and limits will only work if the network supports this feature.

### View Meters

  


Duration Remaining Cost


Switch to the meter you want.



 Accept.




### Reset Meters

 

Switch to "Reset".



 Accept.



Select "Duration" or "Cost".



To reset.



For some of these options you might need your PIN or PIN2 code (depending on your operator).



## MENUS / SETTINGS...

### Set-up meters

From Meters switch to "Setup".

Meters  
← Setup

Enter PIN:  
\_

Type your PIN code (or more often, your PIN2). Depending on the network.

Currency  
\_

Press and hold to clear your entry.

For example BEF (Belgian francs).

...

Currency  
BEF\_

Price/unit:  
\_

For example 2.50 francs per unit.

2  
ABC

Price/unit:  
2\_

Press and hold for the decimal point.

5  
JKL

Price/unit:  
2.5\_

### Key tones ON/OFF

Each time you press a key, a tone is emitted. You can silence the key tones by turning them off.

MENU

Switch to "Settings".

OK

From Settings switch to "Key tones".

Settings  
◀ Key tones ▶

OK

Key tones  
◀ Set off ▶

Set off ♦ Set on

 
 
Accept.

Set

## MENUS / SETTINGS...

### Choose ringer


When your phone rings, it plays a melody. You can change this melody.



Current melody



 
For other melodies.



Phone plays the melody.



 Accept.



The «Key tones» and «Ringers» menu items are not visible when the volume is set to «Silent» or «Vibrator»

### Cell broadcast

The broadcast menu allows you to activate or deactivate the reception of SMS broadcast by the network.



From «Setting» switch to «Broadcast»



Accept.



Reception ♦ Topics ♦ District



The topics menu allows you to define the type of message you want to receive.

### VIEW TOPICS



Accept.



 
View ♦ Add




This function allows you to view which topics are registered in your phone (e.g: weather report). To delete or change a topic in the topics list use delete or change options.

...

### ADD A TOPIC




Accept.

 

Enter the name you want to associate with the topics.



 Accept.



Enter the code given by your network operator for this topics.




Accept.

### RECEPTION

 The reception menu allows you to activate or deactivate the reception of registered topics.



From Broadcast switch to «Reception»



## MENUS / SETTINGS...

...

Accept.

Reception  
◀ Set off

Set on ♦ Set off

Select the desired option.

Accept.

**DISTRICT**  
The district menu allows you to select a topic from the topics list, which you would like be permanently displayed. As a result, for this special handling of messages you must enter the topic in both the district menu and the topics menu.

Broadcast  
◀ District

Accept.

**Manual registration**

When travelling abroad, it may be useful to manually register with a network of your choice.

From Settings switch to "Register".

Settings  
Register ▶

Requesting

Register  
Net A ▶

Switch to desired network.

Accept.

Your phone will revert to automatic network selection next time you switch it on.

**Voice Mailbox number**

To be able to use Voicemail you need to set up your voice mailbox number.

Ask your network operator for this number.

From Settings switch to "Box number".

Settings  
◀ Box number ▶

Box number:  
—

Enter number.

To correct (if needed).

This menu may not appear. Depends on your subscription.

## MENUS / SECURITY...

### Consult your voice messages



 
 
Lights up on the display if you have a new voice message.

Availability of this feature depends on your network.



Press and hold to call for your voicemail.

OR




To call.

### Pin request




 Switch to "Security"



Set off ◀ Set on

 Switch to desired option.



Enter the PIN code.



### Change PIN and PIN 2 codes



Security  
◀ Change PIN ▶



Accept.



Old PIN:  
—



Enter old PIN code.



New PIN:  
—



Enter new PIN code.



Accept.



Repeat PIN:  
—



Enter new PIN code again.



Accept.



Changed

## MENUS / SECURITY...

### Fixed names

Your network operator may have provided you with a SIM card which supports fixed names (FDN). You can restrict the use of your phone to the numbers stored in the fixed names list.

VIEW FIXED NAMES

From Security switch to "Fixed names".

Security  
Fixed names

OK

Fixed names  
View

Search View Add Restrictions

OK

Fixed names  
Thomas

OK

To view other names.

OR

To call.

### Add names

From "Fixed Names" switch to "Add".

Fixed names  
Add

OK

Enter PIN2:  
-

Enter PIN2.

Name:  
-

Enter name.

OK

Number:  
-

Enter number.

OK

Stored

### Restrict to fixed names

From "Fixed Names" switch to Restriction.

Fixed names  
Restriction

OK

Restriction  
Set on

Set off Set on

OK

Accept.

Enter PIN2:  
-

Enter PIN2:

OK

Activated

If "Restriction" is activated, then only the numbers in the fixed names list can be called.

## MENUS / EXTRA...

### Alarm

The phone offers you some fun and practical functions.



 
Switch to "Extra"




#### ALARM

Your phone has a 24 hour alarm clock. The alarm will ring even if the phone is switched off. When the alarm rings press any key to silence it.

#### SET ALARM OFF




Set off Set on

 

### Set alarm on



 Set off Set on




> Minutes decrease  
< Minutes increase

OR



 
Enter hour and minutes (eg: 07:45).



### Set clock



 From Extra switch to "Set clock".



< Minutes decrease  
> Minutes increase

 
OR



Enter hour and minutes (eg: 19:42).



Accept.



You have to set the clock if you remove the battery.

# MENUS / EXTRA...

### Calculator

Your phone has a calculator to add (+), subtract (-), multiply (\*), and divide (/).

**Network**

# =

Press and hold to use calculator.

OR

from Extra switch to "Calculator".

**Extra** ← Calculator →

OK

**Calculate:** 0\_

To	+	-	*	/
PRESS				
	Once	Twice	Three times	Four times

For example 3x6=18

3 DEF

...

**Calculate:** 3\_

\* +

**Calculate:** 3 \* \_

6 MNO

**Calculate:** 3 \* 6\_

# =

**Calculate:** =18

C To clear.

This feature is only available for countries participating in the European Monetary Union. It allows you to easily convert Euros into your local currency and vice versa.

From Extra switch to "Converter".

**Extra** ← Converter

OK

**Converter** Euro->FF ▶

◀Euro->FF♦FF->Euro▶

Switch to desired type of conversion.

OK

**Euro:** -

Enter amount (e.g.: 10.5 Euros).


**Euro:** 10.5

Press and hold zero to enter a decimal point.


OK


# MENUS / EXTRA...


## Biorythm calendar


 10.5 Euro  
66.75 FF

Your phone has a game which allows you to find your potential, or this of your friends, for a given day.


 From Extra switch to "Bio calendar".


 Extra  
◀ Bio calendar




 Birth date:  
dd/mm/yyyy

Type your birth date.


 Birth date:  
04/06/1974




 Date:  
dd/mm/yyyy


...


Enter the date for which you want to know the bio-rythm results.


 Date:  
30/03/1999





The results can be:


 Chance ▶  
■ ■ ■ ■ □




 Love ▶  
■ ■ ■ ■ □




 Energy ▶  
■ ■ ■ ■ □

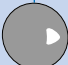



 Success ▶  
■ ■ ■ ■ ■


## Stopwatch


You can time a race or other event.


 This stopwatch is not a professional measuring device. Its measurements cannot be applied in an official context.


 From Extra switch to "Stopwatch".


 Extra  
◀ Stopwatch ▶




 Stopwatch:  
00:00:00.00

 Start the stopwatch.

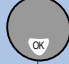 Stop the stopwatch.

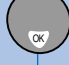 Restart the stopwatch.

 Reset the stopwatch to zero (when stopped).





## MENUS / CALL FORWARDING...
  
### Call forwarding

Depending on your network operator your phone will allow you to divert all your calls to voicemail or to another number. You will have to select the type of forwarding you want .



Switch to "Forwarding"



Always If no reply If busy Unreachable Cancel all



Select the option wanted by pressing the OK key

Example : Always FORWARD ALWAYS TO MAILBOX



 
Status Cancel To mailbox To number



Switch to mailbox



...




Your phone will not ring as long as your calls are forwarded to your mail box.



To be able to forward calls to your voice mail check that your mail box number has been set correctly ( see "Settings" section page 23)

FORWARD ALWAYS TO NUMBER

 
From "Forwarding" switch to "Always"



Status Cancel To mailbox To number



 
Select "To number"



### Cancel all



 Enter the number to which you want to divert your calls




"Status" will show you if this specific call forwarding option is activated or not . You can cancel each individual forwarding option by using "Cancel" instead of "Cancel all"

CANCEL ALL



 From "Forwarding" switch to "Cancel all"



Your phone will now receive calls as normal ;

## PHILIPS AUTHENTIC ACCESSORIES

*"When Performance Counts... Philips Authentic Accessories are Designed to Maximize the Performance of Your Philips Phone".*

### PLUS Battery

#### Reference

BHR 130/P	9911 240 32041
NIMH	1300 mAh



### SLIM Battery

#### Reference

BHR 127/P	9911 240 32040
NIMH	700 mAh

### Cigarette Lighter Adapter 12V - 24V

#### Reference

CKLR 12/P	9911 240 34118
-----------	----------------



### Deskstand Charger

#### Reference

DTSC 12/P	9911 240 35143
-----------	----------------



### Fast Travel Charger

#### Reference

Europe	ACSR 12/P	9911 240 30042
Taiwan/USA	ACTR 12/P	9911 240 30043
UK	ACUB 12/P	9911 240 30044
Australia	ACAR 12/P	9911 240 30045



### Fast Battery Charger and Conditioner

The cradle holds a single battery. Four versions of AC plugs available.

#### Reference

Europe	DTER 12/P	9911 240 35137
Taiwan/USA	DTTC 12/P	9911 240 35139
UK	DTUC 12/P	9911 240 35140
Australia	DTAC 12/P	9911 240 35141



## PHILIPS AUTHENTIC ACCESSORIES

### **Basic Car Kit**

Keeps your phone secure and within easy reach while the battery is charging.

CKBR 12/P

#### **Reference**

9911 240 34210



### **Car Kit with Headset**

Enjoy hands-free conversation while your phone is secure and within easy reach.

CKSR 12/P

#### **Reference**

9911 240 34211



### **Easy Hands-Free Car Kit**

Complete hands-free solution with an advanced design speaker and microphone. Easy to install - simply plug into the vehicle power outlet. Your battery charges while secure in the cradle.

CKER 12/P

#### **Reference**

9911 240 34420



### **Headset**

Use your phone under almost any situation with this convenient hands-free, very mobile solution.

HSSR 12/P

#### **Reference**

9911 241 30017



### **Personal Accessories**

Keeps your phone within easy reach, safe and secure.

Carry Case with Belt Clip

#### **Reference**

PBCR 12/P 9911 240 37023

Belt Clips (3 colors per package)

VBCR 12/P 9911 241 39203

Phone Necklace

VPNR 12/P 9911 241 39204



### **Easel-Style Phone Stand**

Keeps the display on your phone at an easy-to-read angle.

VPER 12/P



#### **Reference**

9911 241 39205



Ask for Philips Authentic Accessories where you bought your Philips phone.

## TROUBLESHOOTING

PROBLEM	SOLUTION
<p>The phone does not switch on.</p>	<p>Check if the battery is correctly inserted (big arrow facing you and pointing to the top) and/or charge the phone until the battery icon has stopped flashing.</p>
<p>The display shows «BLOCKED» when you switch on.</p>	<p>Somebody tried to use your phone but did not know the PIN code or Unblocking code. Contact your service provider.</p>
<p>The  and  symbols are not displayed.</p>	<p>The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside of the network coverage area. Try from another place.</p>
<p>The display doesn't respond (or responds slowly) to key pushes.</p>	<p>The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again.</p>
<p>Your phone shows "insert SIM" on the display.</p>	<p>Remove your battery. Check that the micro SIM card is correctly inserted (clipped corner at the top left - see page 3).</p>
<p>When charging the battery, the battery icon shows no bars and the outline is flashing.</p>	<p>Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).</p>

## SAFETY PRECAUTIONS

### RADIO WAVES

 
- Your phone transmits/receives radio waves in the GSM frequency (900/1800 Hhz).
- The GSM network controls transmission power (0.01 to 2 watts).
- Your phone complies with all relevant safety standards.
- The CE mark on your phone shows compliancy with European electromagnetic compatibility (Ref. 89/336/EEC) and low voltage directives (Ref. 73/23/EEC).

### SAFETY PRECAUTIONS

- Careless use can cause harm to you and others.
- Please inquire and respect local laws and regulations.
- Use your phone in the normal operating position (to ear).
- Avoid touching the antenna while a call is in progress.
- Do not use your phone if the antenna is damaged (risk of minor skin burn).
- Keep your phone in a safe place, out of reach of small children.
- Check with other manufacturers that consumer electronics will not be affected by radio energy.
- Avoid use of phone while driving. It affects your concentration.
- Switch phone off in an aircraft. It is illegal to use cellular phones when airborne.
- Switch phone off near hospitals or medical equipment.
- Ask manufacturer about radio wave shielding of electronic medical devices you may use (pacemaker, hearing aid).
- Switch phone off where blasting is in progress (for example in quarries).
- Switch phone off in potentially flammable atmosphere (petrol stations, fuel depot, chemical plants).

### ENVIRONMENTAL CARE

- Please remember to observe the local regulation regarding the disposal of your packaging material, exhausted batteries and old phone and where possible promote their recycling.



- *The phone must ALWAYS be switched OFF by pressing the Red ON/OFF key and never by removing the battery while the phone is ON. Otherwise, the stability of the settings, alarm clock and ring cannot be guaranteed.*
- *The phone is equipped with an alarm clock that, if set, will ring. If the phone is off and the alarm rings, no radio waves are transmitted. Press any key to turn off the alarm.*

## INDEX

- Accessories - 31
- Alarm - 27
- Battery - 2, 31
- Biorhythm calendar - 29
- Calculator - 28
- Calls - 20
  - Answer a call - 8
  - Answer a second call - 10
  - Call forwarding - 30
  - Emergency call - 9
  - End a call - 7
  - International call - 9
  - Last calls - 8
  - Make a call - 7
  - Menu - 19
  - Reject a call - 8
- Capital letters - 6
- Cell Broadcast - 23
- Clear display - 8
- Clock - 26
- Compass key - 4, 12
- Consult last calls - 8
- Display - 5
- DTMF tones - 11
- Earpiece volume - 8
- Emergency - 9
- Emotion Icons - 18
- Entering Text - 6
- Euro Converter - 28
- Extra - 27
  - Alarm - 27
  - Biorhythm calendar - 28
  - Calculator - 28
  - Clock - 26
  - Euro Converter - 28
- Stopwatch - 28
- Fixed names - 26
- Flash Dial - 11
- Forward calls - 30
- Hide identity - 11
- Keypad - 4
  - Lock - 9
  - Unlock - 9
- Languages - 9
- Last calls - 8
- Mailbox number - 24
- Manual registration - 24
- Menus
  - Calls - 20
  - Extra - 27
  - Messages - 16
  - Names - 13
  - Security - 25
  - Settings - 22
  - Voicemail - 24
- Messages - 16
  - Cell Broadcast - 22
  - Menu - 16
- Meters - 21
- Micro-SIM card - 2
- Names - 13
  - Add a name - 13
  - Menu - 13
  - Fixed names - 26
  - Search a name - 15
  - View list - 14
- Phone - 4
  - Own number - 15
- PIN - 25
- Ringer volume - 8
- Restrict to FDN - 26
- Scratchpad - 10
- Safety Precautions - 34
- Security - 25
- Settings - 22
- Set
  - Alarm On/Off - 27
  - Clock - 27
- Set-Up - 22
- Switch On/Off - 7
- Stopwatch - 28
- Touchtones (DTMF) - 11
- Troubleshooting - 33
- Voice dialling - 7
- Voicemail - 24
- Volume
  - Earpiece - 8
  - Ringer - 8
  - Vibrator - 8

## TABLE OF CONTENTS

Table of contents		Read archived messages	17
Glossary	1	Send short messages (SMS)	17
Before you start	2	Service center number	17
The micro-SIM card	2	Emotion icons	18
The battery	2	Send short messages from phonebook	19
Insert the micro-SIM card	3	Usual messages	19
Insert the battery	3	Calls	20
Discover your phone	4	View calls	20
Display	5	Delete all calls	20
Entering text	6	Meters	21
Basic functions	7	View meters	21
Switch ON/OFF	7	Reset meters	21
Voice dialling	7	Settings	22
Make a call	7	Set up meters	22
Answer or reject a call	8	Key tones ON/OFF	22
Earpiece volume	8	Choose ringer	23
Consult last calls	8	Cell broadcast	23
Adjust ringer volume	8	View topics, add a topic	23
Emergency call	9	Manual registration	24
Change language	9	Voice mailbox number	24
International call	9	Consult your voice messages	25
Keypad lock/unlock	9	Security	25
Special functions	10	Pin request,	25
Answer a second call	10	change PIN and PIN 2 codes	25
Automatic redial	10	Fixed names	26
Scratchpad	10	Extra	27
Touchtones (DTMF)	11	Alarm clock, (set off/set on)	27
Hide your identity	11	Set clock	27
Setting up Flash Dial	11	Calculator	28
Menus	12	Euro converter	28
Discover the Compass key	12	Biorythm calendar	29
Names	13	Stopwatch	29
Add a name	13	Call forwarding	30
Add voice dial	13	Forward always to voice mail	30
View names in the name list	14	Forward always to number	30
Quick access to names	14	Cancel all	30
Search for a specific name	15	Philips Authentic Accessories	31
Road your own number	15	Troubleshooting	33
Delete a name	15	Safety Precautions	34
Messages	16	Index	
Read new messages	16		