



# SGH-C300 User's Guide

- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.: GH68-12795A  
English (EU). 11/2006. Rev.1.1


**Silent mode** Press and hold **#** in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

**Voiceicemail server** Press and hold **1** in Idle mode to access your voicemail server.

**SOS mode** With the phone closed, press the **C** key four times in Idle mode to send an SOS message to preset phone numbers. Once the SOS message is sent, the phone will change to SOS mode and will receive calls only from the SOS message recipients until the SOS mode is cancelled. Upon receiving a call from the SOS message recipients, the phone will automatically answer the call, after one vibration, relaying the emergency situation to the caller.

## Display


Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

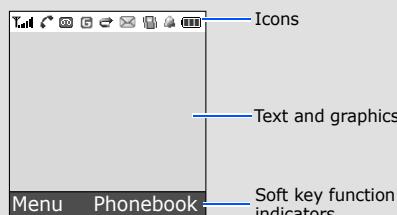

## Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (**OK/E**) or right soft key (**OK/U**) to perform the function indicated.

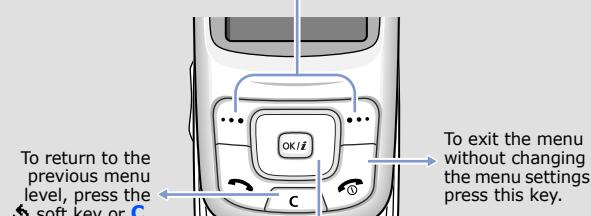


Use the 4-way navigation keys (**OK/E**, **OK/U**, **OK/L**, **OK/R**) as shortcuts to access your favourite menus.


- In Idle mode, press the **Menu** soft key.
- Select **Phone settings** → **Shortcuts**.
- Select a key.
- Select a menu to be assigned to the key.

## Installing the SIM card and battery

- Remove the battery cover and insert the SIM card.

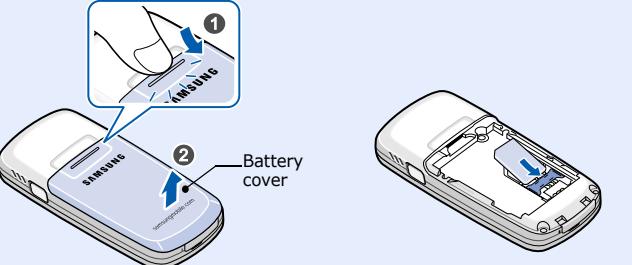


- Install the battery and reattach the cover.

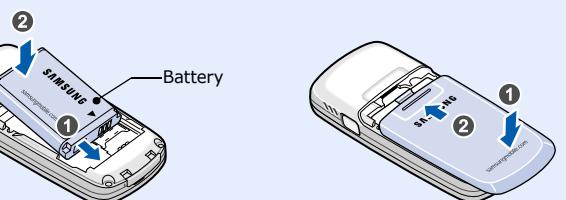

## Charging the battery

- Plug the supplied travel adapter.

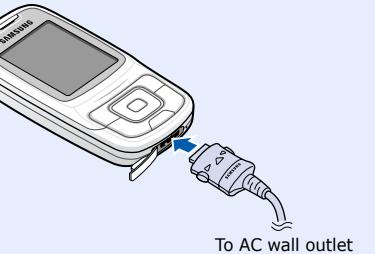


- When charging is finished, unplug the adapter.



**Note:** Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

## Phone layout and key functions

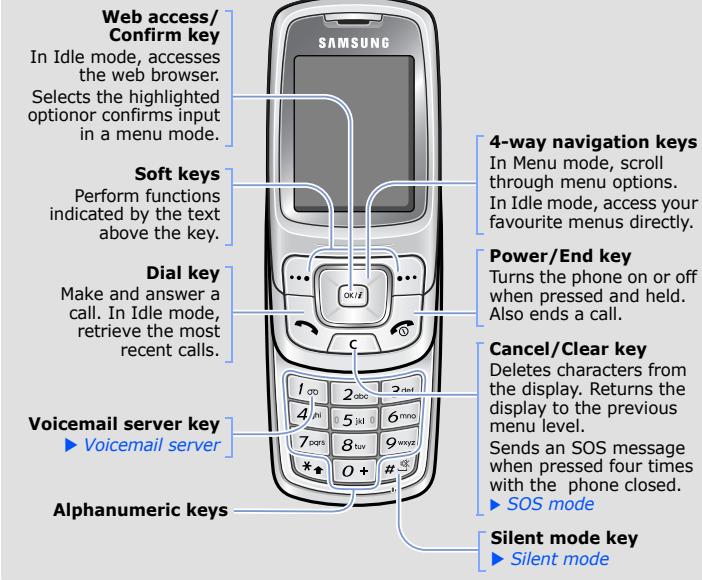

## Adjusting the volume

- In Idle mode, press the **Menu** soft key.
- Select **Sound settings** → **Ring volume**.
- Press **Up** or **Down** to adjust the volume level.
- Press the **OK** soft key.

## Changing a ringtone for calls

- In Idle mode, press the **Menu** soft key.
- Select **Sound settings** → **Ring tone**.
- Select a ringtone.

## Redialling recent numbers

- In Idle mode, press **OK/U**.
- Press **Up** or **Down** to scroll to the number you want.
- Press **OK/U** to dial the number.

## Entering text

### Changing the text input mode

In a text input field, press the right soft key until the input mode indicator you want appears:

- T9** : T9 mode
- A** : ABC mode
- 1** : Number mode
- None: Symbol mode

### T9 mode

- Press **2** to **9** to start entering a word. Press each key once for one letter.  
Example: To enter "Hello" in T9 mode, press **4**, **3**, **5**, **5**, and **6**.  
T9 predicts the word that you are typing, and it may change with each key that you press.
- Enter the whole word before editing or deleting characters.
- When the word displays correctly, go to step 4. Otherwise, press **0** to display alternative word choices for the keys that you have pressed.  
For example, *Of* and *Me* use **6** and **3**.
- Press **#** to insert a space and enter the next word.

## Menu map

<b>1. SIM AT*</b>	<b>4.8 Slide tone</b>	<b>8. Phonebook</b>
<b>2. Call records</b>	<b>4.9 Power on/off</b>	<b>8.1 Search</b>
2.1 Missed calls	<b>4.0 Extra tones</b>	<b>8.2 New entry</b>
2.2 Received calls		<b>8.3 Group search</b>
2.3 Dialed calls		<b>8.4 Edit group</b>
2.4 Delete all		<b>8.5 Speed dial</b>
2.5 Call time		<b>8.6 Delete all</b>
2.6 Call cost*		<b>8.7 Memory status</b>
<b>3. Network services</b>	<b>5.4 SOS messages</b>	<b>8.8 SDN*</b>
3.1 Call diverting	<b>6.1 WAP browser</b>	<b>9.1 Display settings</b>
3.2 Call barring	<b>6.2 Games</b>	<b>9.2 Greeting message</b>
3.3 Call waiting	<b>6.3 Sounds</b>	<b>9.3 Slide settings</b>
3.4 Network selection	<b>6.4 Images</b>	<b>9.4 Own number</b>
3.5 Caller ID	<b>6.5 Delete all</b>	<b>9.5 Language</b>
3.6 Closed user group	<b>6.6 Memory status</b>	<b>9.6 Security</b>
<b>4. Sound settings</b>	<b>7.1 Alarm</b>	<b>9.7 Extra settings</b>
4.1 Ring tone	<b>7.2 Calendar</b>	<b>9.8 Shortcuts</b>
4.2 Ring volume	<b>7.3 Time &amp; Date</b>	<b>9.9 Reset settings</b>
4.3 Alert type	<b>7.4 Calculator</b>	
4.4 Keypad tone	<b>7.5 To do list</b>	
4.5 Keypad volume	<b>7.6 Voice memo</b>	
4.6 Message tone	<b>7.7 Currency exchange</b>	
4.7 Alert on call		* Show only if supported by your SIM card.

