

SIEMENS mobile

Be inspired

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2003
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.my-siemens.com

C62



Safety precautions	3	Organiser	37
Phone overview	5	Calendar	37
Display symbols (selection)	7	Appointments	38
Getting started	8	Voice mail/mailbox	40
Insert SIM card/battery	8	SMS	41
Charging the battery	9	Writing and sending	
Switch on, off / PIN entry	10	SMS messages.....	41
Switching on your phone		SMS to Group.....	43
for the first time.....	10	Read SMS.....	43
General information	12	Lists	44
Security	15	Archive	45
Codes	15	MMS	46
Clear SIM-card barring.....	16	Writing/sending	
My phone	17	MMS messages	46
Making a phone call	18	Receive/read MMS.....	48
Handsfree.....	20	Lists	49
Hold call	21	Message profiles	51
Conference.....	22	SMS profile	51
Text entry	23	MMS profile	52
Text modules	26	Cell broadcast	53
Addressbook	27	Profiles	54
<New entry>.....	27	Extras	56
Groups	29	SAT menu	56
Businesscard.....	30	Alarm clock	56
SIM card entry	30	Calculator	57
Records	32	Recorder	57
Durat / charges	33	Stopwatch.....	58
Surf & fun	34	Countdown	59
Internet browser (WAP).....	34	Camera (Accessories)	59
Games	36		

See also Index at the end of this User Guide.

Fast access key	61	Notes A-Z	76
Speed dialling keys	62	Data Exchange Software	81
My menu	63	Questions & Answers	82
Filesystem	64	Customer Care	85
Setup	65	Care and maintenance	87
Display	65	Product data	88
Audio	67	Accessories	89
Keys	68	Guarantee certificate (UK)	91
Phone setup	69	Guarantee certificate (IRL)	92
Clock	71	Menu tree	93
Connectivity	72	SAR- European Union (RTTE)	97
Security	73	SAR - International (ICNIRP)	99
Network	74	Index	100
Accessories	75		

See also Index at the end of this User Guide.

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



The mains voltage specified on the power supply unit (Volt) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (p. 67), info tones (p. 68) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 20). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the operating licence.

Please note:

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

If you wear the phone around your neck, please use only the Siemens original FCT-500 Loop Case. In order to avoid any injuries or death from strangulation no other accessories are allowed for this purpose. Childs up to 14 years shall not wear the phone around the neck.

Improper use will invalidate the guarantee!

① Integrated antenna

Do not interfere the phone unnecessarily above the battery cover, this reduces the signal strength.

② Loudspeaker**③ Display symbols**

Signal strength/GPRS available/
battery level.

④ Control key

See next page

⑤ Input keys

Numbers, letters

⑥ Microphone**⑦ Plug socket**


Connection for charger, headset etc.


Note

Your phone's display is delivered with a protective film.

Remove this film before getting started.

In rare cases the static discharge may cause discolouration at the edges of the display. However this will disappear within 10 minutes.

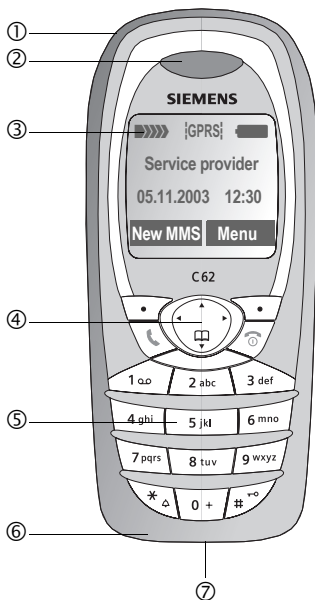

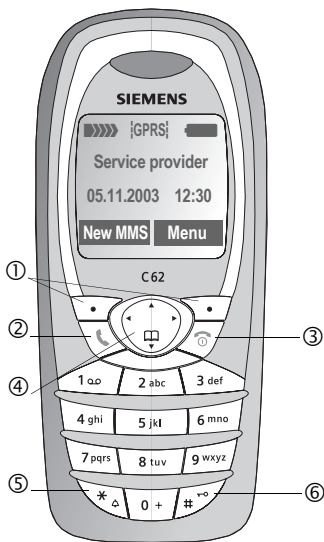

① Soft keys

The current functions of these keys are shown in the bottom line of the display as **text** / icons.

② Call key

Dial phone number/name displayed, take calls.

In standby mode: Show last dialled phone numbers.

③ On/Off/End key

- Switched off: hold **down** to switch on.
- During a call or in an application: press **briefly** to finish.
- In menus: press **briefly**: one level back. Press and **hold**: return to standby mode.
- In standby mode: hold **down**, to switch off phone.

④ Control key

In lists and menus:



Scroll up/down.



Select function.



Menu level back.

During a call:



Open call menu.



Display volume setting.

In standby mode:



Open **Addressbook**.



Open **menu**.



GPRS info.

⑤ Hold down

- In standby mode: switch on/off all signal tones (except alarm).

For incoming calls: switch off ringtones only.

⑥ Hold down

- In standby mode: switch key lock on/off.

Display symbols



Signal strength.



Charging.



Battery charging status,
e.g. 50%.



Addressbook.



Records.



Surf & Fun.



Organiser.



Messages.



Profiles.



Extras.



File system.



Setup.



All calls are diverted.



Ringer off.



Short ring (beep) only.



Ringer only if caller is stored in
the Addressbook.



Alarm set.



Alarm clock activated.



Key lock activated.

Phone numbers/names:



On the SIM card.



On the SIM card
(PIN 2 protected).



In the phone memory.



No network access.



Function activated/deactivated.



Indicates whether upper- or
lowercase letters are active.



Text input **with** T9.



Activated and available.



Registered.



GPRS Download.



Headset mode.



Auto answer feature on.

Organiser/Extras symbols



Memo.



Call.



Meeting.



Alarm clock.



Stopwatch.

Soft keys



Message received.



MMS received.



MMS notification received.



Voice mail received.



Unanswered call.



Save in Addressbook.




Copy from Addressbook.

Depending on your service provider, some of the symbols displayed here may differ from those on the phone.


Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your account is stored. If the SIM card is in credit-card size, snap out the smaller segment out and remove rough edges.


- Remove the battery cover by pressing top centre of the cover and slide downwards.

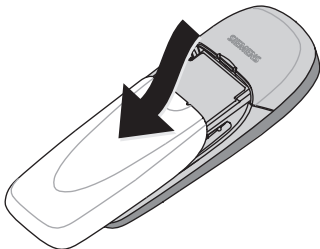


- Insert the SIM card into the slot with the contact area **facing downwards** and push gently until it engages below the holder (make sure the angled corner is in the correct position).

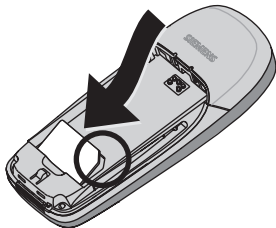

- Place the battery into the block of the phone, with the contact area facing down. Push the battery carefully downwards.

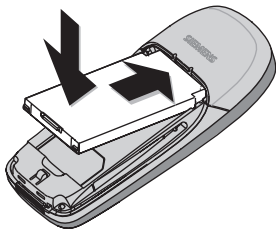

- Slide the battery cover upwards from the bottom of the phone, until it latches into place.

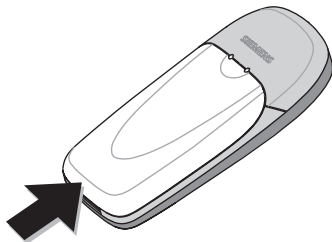

Note


Always switch off phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider, if you have an older card.

Functions without SIM card page 80

Charging the battery

The battery is not supplied fully charged. Plug the charger cable into the bottom of the phone, plug the power supply unit into the mains power socket and charge for at least 3,5 hours.

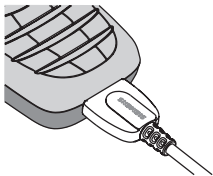

Display when charging is in progress



During charging.

Charging time

An empty battery is fully charged after about 3,5 hours. Charging is only possible within the temperature range of +0 °C to +45 °C. If the temperature rises/falls above/below this, the charge symbol flashes a warning. The voltage specified on the power supply unit must not be exceeded.

To obtain maximum performance of the battery it must be fully charged and then emptied at least five times.

Charge icon not visible

If the battery was completely discharged, the charging symbol will not be immediately visible when connected to the charger. In this case the battery is fully charged after 4,5-5,5 hours.

Only use the charger provided!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is displayed correctly only after uninterrupted charging/discharging. You should therefore **not remove the battery unnecessarily** and where possible **not interrupt charging prematurely**.

Note

The charger will become hot after extended use. This is normal and not dangerous.

Performance..... page 78

Battery quality statement..... page 76

Activate/deactivate




Hold **down** On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4-8 digit PIN.



Enter the PIN using the number keys. The characters ******** appear to ensure nobody can read your PIN on the display. Correct errors with **<C**.

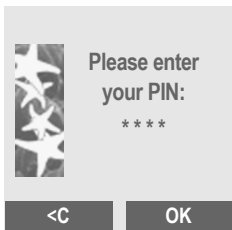

OK

Confirm your input with the right soft key. Logging on to the network will take a few seconds.

Switching on your phone for the first time

Time and date

The clock must be set to the right time once at start-up.

Change Press.




Enter the time, validate with **OK**.

Change Enter the date, validate with **OK**.

Now you are also asked if you want to copy the SIM card phonebook entries to the Addressbook on the phone. If you choose **Yes**, please **do not interrupt** this **procedure**. During this time **do not accept** incoming calls. Follow instructions on the display.

You are able to copy data from the SIM card later on (page 30).

Standby mode

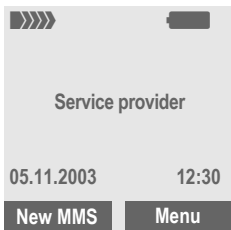

When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**.

The left soft key may have different functions pre-assigned.





Hold **down** the On/Off/End key to return to standby mode from any menu option.

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key, **SOS** you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

Note

	Signal strength	page 78
	SAT menu (optional)	page 56
	Change PIN	page 15
	Other network	page 74
	SIM card problems	page 79
	Clear SIM card barring	page 16

User guide

The following symbols are used to explain an operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press the control key on the side indicated.



Soft keys.

Menu

Displays a soft key function.



Function dependent on service provider, may require special registration.


Menu controls

In this user guide the steps needed to reach a function are shown in **concise form**, e.g. to display call list for missed calls:

Menu →  → Calls missed

This corresponds to:

①

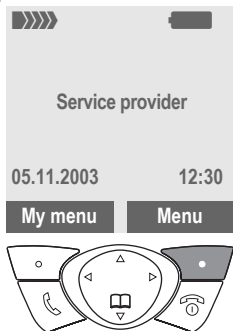


Menu

Open menu.


From standby mode:
press **right** soft key.

②

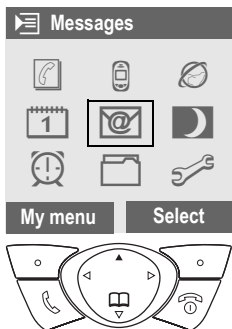

Select  **Records**.
Press **top** of control key.


③

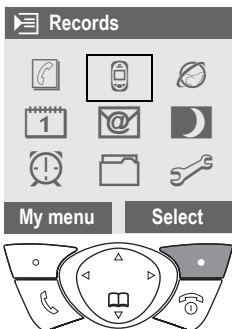

Select

Press.
Press **right** soft key to open the Records submenu.


④

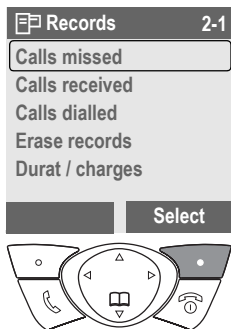

Select



Press.
Press **right** soft key to open the Calls missed list.

⑤

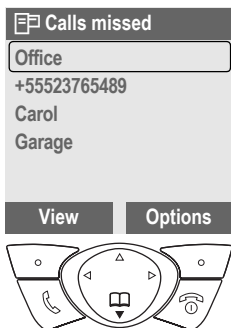


Scroll to the required entry.
Press control key **at the bottom** to scroll down.

 ⑥

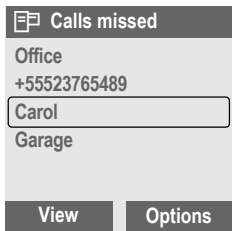

⑦

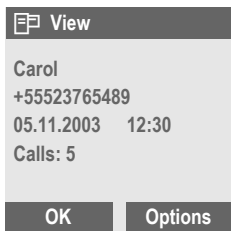**View**

Press.


Press **left** soft key to show phone number with date, time and number of calls.

Codes

The phone and the SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions requiring special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone.

Menu →  → Security → Codes
→ then select function.

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Change Press.



Enter PIN.



Confirm input.

Change PIN

You can change the PIN to any 4-8 digit number you find easier to remember.



Enter **current** PIN.



Press.



Enter **new** PIN.



Repeat **new** PIN.

Change PIN2

(display only if PIN 2 is available).
Proceed as with **Change PIN**.

Chg.phonocode

The preset phonocode is 0000 for all phonocode protected functions. You are able to change it:



Enter **current** phonocode.



Press.



Enter **new** phonocode (4-8 digits).



Repeat **new** phonocode.

Clear SIM-card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.


Prevent accidental activation

Even if PIN entry is deactivated (see page 15), confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e.g. when you are carrying it in a pocket.



Hold **down**.

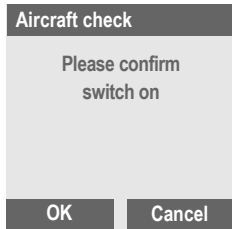

Press. The phone switches on.



Press or take no action. The switching-on operation is broken off.

Change your phone to match your personal requirements.

Ring tones

Assign individual ring tones to caller groups (page 67).

Animations, screensavers, logos, applications

Adjust your phone in the following ways to give it a personal touch and make it just how you want it:

Screensaver

Choose a digital clock or a personal picture (page 66).

(Provider) logo

Choose an individual picture to be displayed in standby mode (page 65).

Wallpaper image

Choose your own background image (page 65).

Colour scheme

Choose a colour scheme for the entire service system (page 65).

Where do I get what?

You can order additional ring tones, logos and screensavers on the Internet and receive them by SMS/MMS:

www.my-siemens.com/ringtones
www.my-siemens.com/logos
www.my-siemens.com/screensaver

My menu

Create your own menu with frequently used functions, phone numbers or WAP pages (page 63).

Dialling with number keys

The phone must be switched on (standby mode).



Dial number (always with area code, if necessary with international dialling code).

<C A **short** press clears the last digit, a **long** press clears the entire number.



Press the Call key to dial the number.

End call



Press the End key **briefly**.

The call is ended. Press this key, even if the other person hung up first.

Set volume



Use the control key (top) to start adjusting the volume (only possible during conversation).



Set volume level and confirm with **OK**.

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key **once**.



Select the required phone number from the list, then press ...



... to dial.


Note

Save phone number in the Addressbook	page 27
Options Call lists	page 32
Hold	page 21
Menu Call menu	page 22
Divert Set divert	page 69
Handsfr. Handsfree	page 20
Microphone off	page 22
Phone number transmission off/on (Hide ID)	page 69
International dialling codes	page 77
Phone number memo	page 78
Control codes (DTMF)	page 76

If number is busy

If the number called is busy or cannot be reached because of network problems, you are able to choose (depending on the service provider):

Automatic redial of last number

Auto dial Press. The phone number is automatically dialed for up to 15 minutes at increasing time intervals. End with:  End key.


Reminder

Prompt Press. A beep reminds you to redial the displayed phone number after 15 minutes.

An incoming or outgoing call or **Off** interrupts these functions.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

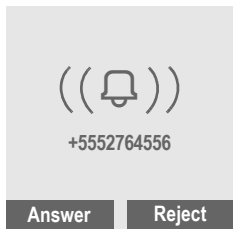

Answer Press.

or



Press.

If the phone number has been transmitted by the network, it is displayed. If the caller's name is in the Addressbook, this will be shown instead of the number. If set, a picture can be displayed instead of the bell icon (page 27).

Note

Please make sure you have accepted the call before holding the phone to your ear. This will prevent a loud ring tone from damaging your hearing!

Reject call


Reject Press. The call will be diverted if this has been set previously (page 69).

or




Press **briefly**.

Note

 Missed calls page 32
 Accept call using any key page 68
 Switch off ringer page 79


Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

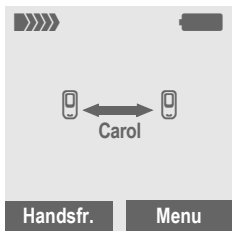

Handsfr. Activate handsfree function.

Yes Switch on.

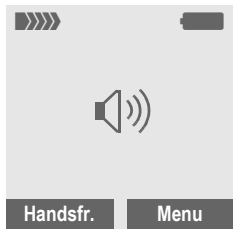

Use the control key to adjust the volume.

Handsfr. Deactivate.

Note

Always deactivate "handsfree talking" before holding the phone to your ear. This will avoid damage to your hearing.

Menu Call menu page 22

Hold call



Establish a second connection


You can call another number during a call.


Menu

Open the call menu

Hold

Put current call on hold.

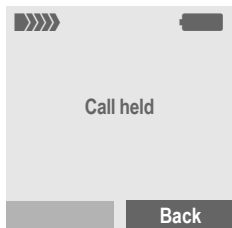

Now dial the new phone number (**Addressbook** ). When the new connection is established:

Swap

Swap back and forth between both calls.

• End current call



End the current call. You are now connected to the other caller.

Incoming calls during a call



This function may require you to register for this service with your service provider and set your phone accordingly.

You may be advised during a call that there is another call waiting by a special "call waiting" tone (page 69).

You have the following options:

• Accept the waiting call

Swap

Accept the waiting call and put the current call on hold to do so. Always proceed as above to swap between two calls.

• Reject waiting call

Reject

Reject the waiting call.

or

Divert

The waiting call is diverted, for example, to the mailbox.

• Accept the waiting call and end the current call



End the current call.

Answer

Accept the new call.

Conference



Call up to 5 parties one by one and link them together in a conference call. Some of the functions described may not be supported by your service provider or may have to be enabled specially. Once you have established a connection:

Menu Open menu and select **Hold**. The current call is put on hold.



Now dial a new number. When the new connection is established ...

Menu ... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked up together (up to 5 participants).


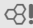
End



All calls in the conference are ended simultaneously when the End key is pressed.

Call menu

The following functions are only available during a call:

Menu	Open menu.
Hold	(page 21)
Microphone on/ Microphone off	Switch microphone on/off. If switched off, the person on the other end of the line cannot hear you (muting). Also:  hold down.
Handsfree	(page 20)
Volume	Adjust handset volume.
Conference	(page 22)
Time/cost	Display call duration and if set, (page 33), costs accruing during the call.
Send DTMF	(page 76)
Call transfer 	The original call is connected to the second one. For you, both calls are now ended.
Main menu	Access to main menu.

Enter text without T9

Press number key repeatedly until the required letter appears. The cursor advances after a short delay.

Example:



Pressing **briefly** once types the letter **a**, twice the letter **b**, etc. The first letter in each name is automatically written in UPPER CASE.

Hold down to write the number.

Ä, ä/1-9

Umlauts and numbers are displayed after the relevant letters.



Press briefly to delete the letter before the cursor, **hold down** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Switch between *abc*, *Abc*, *T9abc*, *T9Abc*, *123*. Status indicator in the top line of the display is shown.

Hold down: All input modes are displayed.



Press briefly: Special characters are shown.

Hold down: All input languages are displayed.



Press once/repeatedly:

.,?!' " 0 + - () @ / : _

Hold down: Writes 0.



Writes blank. Press twice = jumps a line.

Special characters



Press **briefly**. The character map is displayed:

1)	¿	ı	_	;	.	,	?	!	+	-
"	'	:	*	/	()	¤	¥	\$	£
€	@	\	&	#	[]	{	}	%	~
<	=	>		^	§	Γ	Δ	⊙	∧	≡
π	Σ	Φ	Ψ	Ω						

1) Line skip



Navigate to character.

Select

Press.

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

T9 input Select, then

T9 preferred
select.

Select Input language

Select the language in which you want to compose your message.

Options Open text menu.

T9 input Select, then

Language select.

Select Confirm; the new language is set.

T9 language versions


If you want to load a dictionary in another language, you will find a large selection to download from the Internet as well as related installation instructions under:

www.my-siemens.com/t9


Type a word using T9

The display changes as you proceed. Therefore, it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

 press briefly for T9Abc, then

 Press.
A blank ends a word.

Do not use special characters such as Å but write the standard characters, e.g. A; T9 will do the rest for you.

Note



Setting a full stop. The word is ended when followed by a blank space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.

Move to the right. Ends a word.

Press briefly: Switch between: abc, Abc, T9abc, T9Abc, 123. Status indicator in the top line of the display.

Hold down: All input modes are displayed.

Press briefly: Select special characters (page 23).


Hold down: All input languages are displayed.




T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first.

The word must be **highlighted**. Then press

 again. The displayed word is replaced with a different word. If this is also incorrect, repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

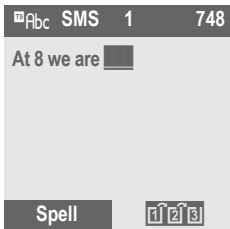

To add a word to the dictionary:

Spell Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **OK** to add it automatically to the dictionary.

Correct a word

Words written **with** T9:



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9-word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word.

Words **not** written with T9:



Move letter by letter to the left/right.



Deletes the letter to the left of the cursor.



Letters are inserted at the cursor position.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Text modules

The phone contains predefined texts that you can add to your messages (SMS). You can also create and store your personal texts.

Write personal stored text

Menu →  → Text module

Options Select <New entry>.



Write text.

Use text modules



Write message (SMS).

Options

Press.



Select **Text modules**.



Select predefined text from the list.

Select

Confirm. The text is displayed.

Select

Confirm. The text is inserted into the message to the right of the cursor.

The Addressbook can store up to 500 entries that are managed in the phone memory. However you can exchange data between the Addressbook and the SIM card.

<New entry>

Create a new entry in the standard directory.



Open **Addressbook**
(in standby mode).



Select <New entry>.

Addressbook	
Name:	
Phone number:	
Address:	
Edit	Save

Edit



Select.
Fill in the input fields.
The max. number of characters is shown in the display.

Save

Save the new entry.

Groups

You can assign entries to different groups (see page 29).

Picture

Assign a picture (calling face) to an entry. It is displayed if you are called by the corresponding phone number.

Change Press and choose a calling face.

(In the beginning the list is empty, select **Options** and then **Filesys**. Now select a picture and it will be copied into the special calling faces folder).

Attach The picture is assigned to the phone number.

Change/Detach picture

If a picture is assigned to a phone number, it can be replaced or removed.



Select an entry with picture in Addressbook.

Options Press.

Detach The assignment is cleared after confirmation.

or

Change Select a new picture from calling face folder.

Attach Press, the old assignment is replaced with new one.

Left soft key

When you scroll through an entry, the left soft key will change, depending on the input field:

View Display respective picture.

Call (search for an entry)



Open **Addressbook**.



Select a name with the first letter and/or scroll.



The number is dialed.

Edit entry



Select required entry in the Addressbook.

Options

Press. Select **Edit**.



Select the field you want to change and press **Edit** (or if you are editing a group entry or picture, press **Change**).



Make changes.

Options

Press. Select **Save**.

Addressbook menu

The following functions are available, depending on the current situation:

Options Open menu.

View	Display entry.
Edit	Open the entry for changes.
New entry	Create a new entry.
Move to ...	Assign an entry to a group.
Copy to SIM	Copy an entry/entries with name and selected phone number into the SIM card.
Copy all to SIM	Copy all entries into the SIM card.
Delete	Delete entry.
Delete all	Delete all entries after confirmation.
Businesscard	Define an entry as your own business card.
Send	Send the entry via SMS.
Capacity	Display maximum and available capacity.

Note

Information on text entry page 23

Groups

4 groups are preset in your phone to enable you to arrange your Addressbook entries clearly. You can rename all groups:

Menu →  → Groups

or



Open **Addressbook**
(in standby mode).

<**Groups**> Select (the number of entries is listed behind the group name).



Highlight a group you want to rename.

Options Open menu.

Rename Select and give group a new name.

Note

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

SMS to group page 43

Group menu

Options Open menu.

Open Display all members of the selected group.


View Display entry.

Options See page 28.

Rename Change name of the group.

Ring tone for a group

If you assign a ring tone for a group, it sounds when one of the group members calls.

Menu →  → Audio → Melodies
→ Group calls



Select a group.

Select Press.



Choose a ring tone.

Select Press.

Businesscard

Create your own business card. Send this via SMS to another GSM phone.

Menu →  → **Businesscard**

If no business card has been created yet, you will be asked for your input.



Move from field to field,

Edit

press to put in your details:

Name:, Phone number:,
Address:, E-mail:, Groups,
Picture.

Save

Press.

Note

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook.

Options


See Addressbook menu (page 28).

SIM card entry

SIM card entry can't be used for calling. You are able to view, copy to Addressbook and delete SIM card entries and you can view the capacity of the SIM.

Entries stored on the SIM card can be used on other GSM phones.

Menu →  → **SIM Entries**

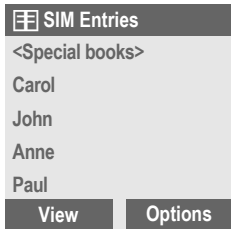

SIM entries are listed with the <Special books> entry on first.

Special books

Four special books are available:

- <Own numbers>
- <Service numb.>
- <SIM phonebook>
- <Protected SIM>

Select



Select a book.

Own numbers		
John		:1
Paul		:2
Jim		:3
Carol		:4
View		Options

The number on the right represents the physical position on the SIM card.

Special book menu

Options Open menu.

View	Display entry.
Copy into 	Copy a highlighted entry to the Addressbook.
Copy all to 	Copy all entries to the Addressbook.
Delete	Delete entry.
Delete all	Delete all entries after confirmation.
Capacity	Display maximum and available capacity.

Your phone stores the phone numbers of calls for convenient redialling.



Choose a call list.



Press.



Select phone number.



Dial phone number.

or



Display information on the phone number.

10 phone numbers can be stored in each call list:

Calls missed



The phone numbers of calls, that you have not accepted, are stored for callback purposes (if the network supports the "Caller Identity" feature).



Icon for missed call (in standby mode).



Press to display phone number.

Calls received



Accepted calls are listed if the network supports the "Caller Identity" feature.

Calls dialled

Access to the last numbers dialled.



Fast access in standby mode.


Erase records

The contents of all call lists are deleted.

Call list menu

The call list menu can be called up if an entry is highlighted.

Options Open list menu.

View	View entry.
Correct no.	Load number to display and edit there if necessary.
Copy into 	Store entry in the Address-book.
Delete	Delete entry after confirmation.
Delete all	Delete all entries in call list after confirmation.

Durat / charges

You can display the charge details and the duration of different types of calls while you speak, as well as setting a unit limit for outgoing calls.

Menu →  → Durat / charges

Select a type of a call:

Last call

All outgoing calls

All incom.calls

Remain. units

Charge settings

Select Display the data.

When displayed, you may do the following:

Reset Clear display.

OK End display.

Charge settings

Menu →  → Durat / charges
→ Charge settings

Currency

(PIN 2 query)



Enter the currency in which the charge details are to be shown.

Personal rate

(PIN 2 query)



Enter the charges per unit/min.

A/c limit

(PIN 2 query)



Special SIM cards allow you or the service provider to define a credit or a period, after which the phone is barred for outgoing calls.

Select Select A/c limit from the Charge settings list, enter PIN 2.

Change Activate/deactivate A/c limit.

Edit Scroll to edit Credit limit, enter number of digits, confirm with **OK**.

Save Save changes.

Then confirm the credit or reset the counter. The status display for pre-paid cards may vary, depending on the service provider.

Auto display

Call duration and call charges are automatically displayed for each call.

Internet browser (WAP)

Menu →  → Internet

Get the latest information from the Internet that is specifically adapted to the display options of your phone.

Internet access may require registration with your service provider.

Internet



The browser is activated when selecting the Homepage. The functions of the right soft key vary, depending on which element is activated in the internet page, for example "select" for a link or "save" for a picture. The contents of the option menus are also variable.

Homepage

A connection is established with the Internet provider's portal (may be specified/configured by default by your service provider).

Bookmarks

Up to 25 URLs can be stored for fast access.

Via **Options** menu you are able to Edit each bookmarks title and address, Delete and send a bookmark via SMS.

Add a new bookmark

Online

Options Press and select **Bookmarks**.

Add bookmark

Select and accept the current WAP address as a bookmark by **OK**.

Offline



Choose **Bookmarks** from Internet menu.

Add bookmark

Select.



Enter the title and the URL address for the bookmark.

Use a bookmark



Choose **Bookmarks** from Internet menu.

Select

Press.



Choose a bookmark.

Go

The selected bookmark is dialed.

Go to...

Enter URL to access WAP page directly, e.g.

wap.my-siemens.com

or select from the most recently visited WAP addresses that are displayed.

Resume

Call up recently visited pages that are still in phone's memory.

Push messages

Messages from WAP server.

Profiles

The list of profiles is displayed for activation / setting (page 35).

Clear cache




Empty the WAP browser memory.

Common settings

Push access: Allow all / Allow none

Server certificates: you can view or delete a certificate from the list.

Instructions on the display

- | | |
|--|---|
| Options | Open the browser menu. |
|  | Page loading on progress. |
|  | Secured connection. |
|  | To select special characters, such as @, ~, !, see page 23. |

End connection



Hold **down** to clear down the connection and to close the browser.

Browser Menu

When the browser is active, the menu can be activated as:

Options Press.

Homepage	Enter homepage, if not set by your service provider.
Bookmarks	A list of bookmarks is displayed including item Add bookmark .
Go to...	Enter URL to access WAP page directly.
Reload	Reload page.
Exit browser	Close the browser and clear down connection.

WAP profiles

Menu →  → Internet → Profiles

Preparation of the phone for WAP Internet access depends on your service provider:

- Settings have already been installed by provider. You can start immediately.
- Access profiles for a number of providers have already been set. Select profile and activate.
- Access profile must be set manually.

If necessary, consult your service provider for details.

Activate WAP profile

You can change the active profile each time before you access the Internet (if the profile has been set already).



Choose the profile.

Select

Activate. The current profile is highlighted.

Set WAP profile

Up to 10 WAP profiles can be configured (may be limited by your service provider). The entries may vary depending on the service provider:



Select profile.

Edit

Open to make settings.

Profile name	Enter/change the profile name.
Homepage	Enter homepage, if not set by the service provider.
Conn. profile	You can create a new profile (page 72), activate one of the list or select <i>Always ask</i> .
Gateway	IP address: Enter IP address. Data mode: Select Conn oriented or Connection less .

Show images Activate/deactivate the downloading of images attached to WAP pages.

**CSD
lingertime** Time in seconds after which a connection should be ended if no input or data exchange takes place.

**GPRS
lingertime** Otherwise same as above but time is presented in minutes.

Security Activate/deactivate.

Games

The phone includes 2 games: Falling and Achevo.

Menu →  → **Games**



Choose the game.

Select


Press.

By selecting the game, the menu list opens with Help item, which includes the instructions how to play.

Falling

Options You can activate/deactivate the sounds.

Calendar

Menu →  → Calendar

You can enter appointments in the Calendar.

- monthly overview,
- weekly overview,
- Agenda.

Time and date must be set for the Calendar to work correctly (page 71).

Monthly overview

Tu	Nov 2003							W45
				1	2	3		
4	5	6	7	8	9	10		
11	12	13	14	15	16	17		
18	19	20	21	22	23	24		
25	26	37	28	29	30			
Week				Agenda				



Scroll between weeks.



Scroll between days.

Week

Display weekly view.

Agenda

List of the day's appointments.

Weekly overview

Tu	Nov 2003						W45
M	T	W	T	F	S	S	
4	5	6	7	8	9	10	
8							
10	■			■			
12				■			
14						■	
16	■						
Agenda				Month			



Scroll by the hour from 0:00 to 24:00 hours.



Scroll between days.

Agenda

List of the day's appointments.

Note



Appointments are displayed by vertical bars.




For detecting overlapping entries, top of each entry is highlighted.

Note

Calendar days in different background color indicate appointments on this day.

Agenda

Agenda Display daily agenda.

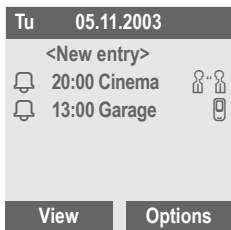

Appointments for the current day are displayed in chronological order in the agenda.

<New entry>

Create a new entry as an appointment on that day.

Calendar options

Different functions are provided, depending on the Calendar item selected or the current organiser function:

Options Open menu.

View Display entry.

Edit Open entry to make changes.

New entry Create new entry as an Appointment (page 39).

Delete Delete selected entry.

Delete all Delete all entries after confirmation.

Send via MMS Send entry via MMS.

Capacity Display available capacity.

Note



Appointment with "alarm activated".



Appointment with "alarm deactivated".

Appointments

Enter new appointment:



Select <New entry>.



Make the entries field by field.

Edit

Browse through displays in the selection fields.

Types of appointment:



Memo. Description with up to 128 characters.



Call. Enter phone number. It is shown with alarm.



Meeting. Description with up to 128 characters.

Description:

Display in the agenda list.

Location:

Location of appointment, e.g. meeting room.

Start date: enter the information

Start time: enter the information

End date: enter the information

End time: enter the information

Alarm:

Select a time for alarm before the appointment:

On time, 5 min before, 15 min before, 30 min before, 1 hour before, 1 day before, 1 week before, Off.

Reoccurrence:

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, Annual.

Save Save the appointment.

Alarm

When the set date and time are reached there is an audible and a visual alarm.

Alarm type **Memo/Meeting**: the text is shown in the display.

Alarm type **Call**: the phone number is displayed for dialling.

Note

Display indicating that alarm is set:



Alarm

Deactivate all alarms page 55

Set alarm tone page 67

Clock page 71

Menu →  → Msg. setup
→ Change voice mail no.

Most service providers supply an external voicemail service. A caller can leave a voice message for you on this if

- your phone is switched off or not ready to receive,
- you do not want to answer,
- you are making a phone call (and **Call Waiting** is not activated page 69).

If voice mail is not part of your service provider's package, you will need to register and settings may have to be made manually. The following description may vary slightly, depending on the service provider.

Settings



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to voice mails left for you.

Menu →  → Msg. setup
→ Change voice mail no.



Select number from Addressbook or enter/change it.

OK

Confirm.

Save call divert number

Calls are diverted to this phone number.

Menu →  → Phone setup → Divert
→ e.g. Unanswered → Set

Enter call divert number.

OK

Registration with network. Divert will be confirmed in a few seconds.

Further information on call divert can be found on page 69.

Listen to



A new voice mail can be displayed as follows:



Icon plus beep.

or



A text message announces a new voice mail.

Call your mailbox and play the message(s) back.



Hold **down** (if necessary enter mailbox number once only). Confirm with **OK** or **Mailbox** depending on your service provider.

Away from your home network you may have to dial a different Mailbox number and enter a password before you can listen to any messages.

You can transmit / receive a very long messages (up to 912/1368 characters) on your phone: these are automatically composed from several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in a SMS.

Depending on the service provider, you are able to send and receive faxes via SMS (change setting if necessary, page 51).

Writing and sending SMS messages

Menu →  → New SMS



Write text.

"Text entry with T9" (page 24) allows you to create longer messages very quickly, using just a few key strokes.

<C Press **briefly** to delete letter by letter, **hold down** to delete an entire word.



Press.



Enter the phone number or select it from the Addressbook.

Groups SMS to group (page 43).


OK

Confirm. Send the SMS to the service centre for transmission. The sent SMS is saved in the "Sent" list.

OK

Return to Edit mode.

Display in the header line

 Abc	SMS 1	739
We start at 8		

 Abc

T9 active.

abc/Abc/
ABC/123

Switch between upper-case/
lower-case letters and digits.

SMS

Display title.

1

Number of SMS messages
required.

739

Number of characters still
available.

Note

Insert pictures & sounds.....page 42

SMS profile.....page 51

If necessary **Message type**,
Validity period, **Service centre**
may be requested.....page 51

SMS status report.....page 51

Enter special characters.....page 23

Text menu

Options Open text menu.

Send	Enter recipient's phone number or select it from the Addressbook, then send.
Save	Save composed text in Unsent list.
Picture&sound	Add pictures, animations and sounds into the message (see following text).
Text modules	Insert text module (page 26).
Clear text	Delete the whole text.
T9 input (page 24)	T9 preferred: Activate/deactivate T9. Input language: Select language for text.
Send via ...	Select a SMS profile for transmission (page 51).

Picture&sound

Insert pictures and sounds into the message.



Compose message.

Options

Open text menu at the end of a word.



Select **Picture&sound**

The menu contains:

Fix animations

Fix sounds

Own anim.

Own pictures

Own sounds

Select

Select.

The first item of the selected list is displayed.



Scroll and select an item of your choice.

Select

The selection is added to the SMS.

Note

Playback only occurs if the destination phone supports the EMS standard (page 77).

In input mode, a wildcard is shown when a melody is selected.

SMS to Group

You can send an SMS message as a "circular" to a recipient group.

Options Open menu.

Send Select.

or



Press.

Groups Press. The addressbook is opened.


<Groups> Select. Then choose a group by **Select**.

Send Press. Transmission is started after confirmation.

Read SMS



Arrival of a new SMS announced on display.

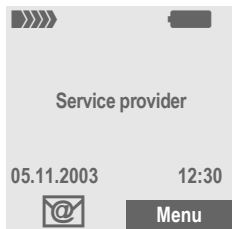

Press the left soft key to read message.

Date/time 05.11.2003 23:45
Tel. no./sender +441932556712
Message Are we meeting tomorrow?

Reply

Options



Scroll through message line by line.

Reply

(see page 43).

Options

(see page 45).

Note

Pictures and sounds in SMS page 42

Message store full page 77

Reply menu

Reply

Open reply menu.

Write mess.

Create a new reply text.

Edit

Edit received SMS or add new text.

Answer is YES

Add a standard text as a reply to the SMS.

Answer is NO

Call back

Delay

Thanks

When the SMS has been edited, it can be saved or sent by **Options**.

Ringtones, icons ...

You can receive ringtones and icons via SMS.



Highlight the received item.

Save

Save and name the item.


Lists

All SMS messages are stored in one of the following lists according to status:

Inbox

Menu → → Inbox → SMS


The list of received SMS messages is displayed.

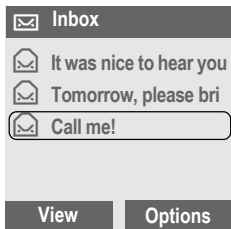

Unsent

Menu → → Unsent → SMS


The list of not yet successfully transmitted messages is displayed. Transmission can be restarted.

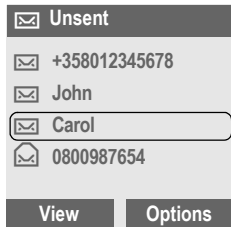

Sent

Menu → → Sent → SMS

The list of sent SMS messages is displayed.

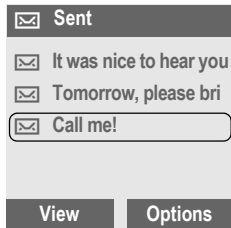

Lists menu

Each list offers different functions:

Options	Open menu.
View	View entry.
Reply	Directly answer incoming SMS messages.
Delete	Delete selected SMS messages.
Delete all	Delete all SMS messages after confirmation.
Send	Enter the number or select it from the Addressbook, then send.
Edit	Open editor for changes.
Capacity	Displays phone's free capacity. In case of segments: number of concatenated SMS messages.
Mark a.unread	Mark SMS as unread (a "New SMS message" icon will appear in idle screen).
Add contact	Copy the phone number into the Addressbook.
Archive	Move a SMS message to the Archive folder.
Send via ...	Select a SMS profile for transmission (page 51).



Unread.



Read.



Concatenated message.



Read concatenated message.



Incomplete unread concatenated message.



Entry on SIM card.

Archive

Menu → → SMS archive

The list of SMS messages stored in the archive folder is displayed.

You can move SMS messages from Inbox, Unsent and Sent folders to Archive folder.

SMS archive

Folder 1

Folder 2

Folder 3

Folder 4

Select

Options

Rename the folder

Options Highlight the folder and open Options menu.

Rename Select and give a new name and ...

Save ... save it.

The **Multimedia Messaging Service** enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of a MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or a notification that a MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Writing/sending MMS messages

A MMS consists of the address header and the content.


A MMS message can consist of a series of pages, each one may include a combination of text, sounds and pictures.

Texts can be written with help of T9 (page 24).

Pictures and **graphics** that have been produced with accessories such as digital cameras, can be attached in JPEG, WBMP or GIF format. See also **Filesystem**, page 64.

Music is sent and received in a MIDI file, single tones/sounds in an AMR file.

Menu →  → New MMS

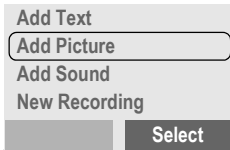

Choose the first content object for the new MMS.

Select

Press.

Edit

Use Edit soft key for composing until your message is ready.



Navigate between slides.

Note

You can add same content type once in one MMS page/slide.

Edit menu

Edit	Open menu.
Add Text	Write text.
Add Picture	The picture list is opened for selection.
Add Sound	Select a stored melody from the list.
Remove Text/ Remove Picture/ Remove Sound	Remove text, picture or sound.
Edit text	Modify text.
Change Picture/ Change Sound	Change picture or sound.
New Recording	Record a new sound.
New slide Remove Slide	Add new page behind the current one or delete the current slide.
Timing	Set Start and End timing of the selected object.
Page duration	Enter length of display for individual pages.

To preview a message

Options Press. Select Preview.

To send MMS

Options Press.
Send Select.

or



Press.

Enter MMS address

To: Phone number/ e-mail address of recipient(s).

Cc: /Bcc: Phone number/ e-mail address for recipient(s) of copy.



Subject: Enter heading.

Priority: select priority by pressing **Edit** and choose from **Low**, **Normal** and **High**.

MMS menu

Different functions are available, depending on context:


Options Open menu.

Send	Send MMS.
Preview	Playback of complete MMS. Press End key to break off.
Next Slide	Display next slide of the MMS.
Previous Slide	Display previous slide of the MMS.

Receive/read MMS



Arrival of new MMS/notification announced on display.

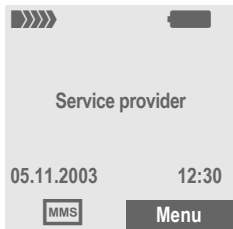


To read the MMS, press the left soft key.

Depending on the profile setting (page 52):

- view complete MMS

or

- the notification is opened. Press **View** to receive the complete MMS.

Cancel the function with .



Scroll line by line.



Navigate between MMS pages.

Attachment

A single MMS can contain several attachments.

When MMS slide show is ended the message content/attachments can be saved (text, sound-, picture- or other attachments e.g. vCard).



Scroll the MMS content with control key and select the attachments you want to save. The selected item is marked with dotted frame.

Sound



Select a sound icon.

Options

Select.

Save Sound

Select and save the sound to the specific folder.

Picture



Select a picture icon.

Options

Select.

Save picture

Select and save the picture to the specific folder.

Attachment



Select an attachment icon (vCal, vCard).

Options Select.

Save attach.

Select and save the attachment to the specific folder.

Lists

All MMS messages are stored in one of the following lists according to status:

Inbox

Menu →  → Inbox → MMS

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press **View**.

Unsent





Menu →  → Unsent → MMS

The list of not yet successfully transmitted messages is displayed. Transmission can be restarted.

Sent

Menu →  → Sent → MMS

The list of sent MMS messages is displayed.

Icon	Importance
	MMS unread
	MMS read
	MMS sent
	Notification unread

Lists menu

Each list offers different functions:

Options Open menu.

Edit and Send	You can make changes to the written message and send it.
Reply	Reply to sender immediately.
Reply to all	Reply to all recipients.
Call	Call to the sender.
Forward	Forward MMS to new recipients.
Resend	The message is sent to the same recipient(s) as earlier.
Delete	Delete selected MMS message.

Delete all	Delete all MMS messages.
Information	Information on MMS is displayed: <ul style="list-style-type: none">• Sender• Recipient• Arrival time• Subject• Size• Priority
Capacity	Size of current MMS as well as capacity still available are shown.

SMS profile

Menu →  → Msg. setup
→ SMS

A number of SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The pre-setting depends on the SIM card inserted.



Select profile.

Options Open menu.

Change sett.
Select.

Service centre Enter or change the service-centre phone numbers as supplied by service provider.

Recipient Enter the standard recipient for this transmission profile.

Message type **Manual**
The message type is requested for each message.

Standard text
Normal SMS message.


Fax
Transmission via SMS.


New
You may need to obtain the required code number from your service provider.

Validity period Select period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum*

* Maximum period that the service provider permits.

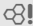Status report
 You will receive confirmation whether delivery of a message has been successful or unsuccessful. This service may be subject to a charge.

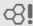Direct reply
 The reply to your message is handled via your service centre when **Direct Reply** is activated (for information please contact your service provider).

Save aft. send Sent SMS messages are saved **Sent** in the list.

Activate profile



Select profile.

Activate Press to activate profile.

MMS profile

Menu →  → Msg. setup → MMS

A number of MMS profiles can be defined. The transmission characteristics of an MMS are defined in these.

Change profile settings



Select one of the profiles.

Options Open menu.

Rename	Give the profile a new name.
Validity	Select the period in which the service centre is to try to deliver the message: 1 hour, 12 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
Read report	ON/OFF If activated, you get the notification that the receiver has opened the message.
Delivery report	ON/OFF If activated, you get the notification that the receiver has received the message.
Auto Download	ON/OFF/On if Home Network If activated, the received MMS is downloaded automatically.

Sent Items	ON/OFF If activated, the sent messages are saved.
Messageserver	MMS relay URL, e.g. http://www.webpage.com
WAP Profile	Select a profile.
Page duration	Enter length of display for individual pages.
Default Priority	Select from Low, Normal and High.

Activate profile



Select profile.

Activate

Press to activate profile.

Menu →  → Msg. setup
→ CB services

Some service providers offer information services (info channels). If reception is activated, your **Topic lists** will supply you with messages on the activated topics.

Receive CB

Activate the phone to receive CB messages. When message is received, it will be displayed at once and it will not be stored in any folder. If Receive CB is off, messages will not be displayed.

Topic list

Add an unrestricted number of topics to this personal list from the topic index (**Topic index**). You can preset 10 entries with their channel number (ID) and, if necessary, their names.

New topic

New topic Select.

- If no topic index (**Topic index**) is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and confirm with **OK**.

Selection from a list

Options Open list menu.

If a topic is selected in the list you can view it, activate/deactivate it, edit it or delete it.

CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Displays



Activated/deactivated.

A profile allows several settings to be made with **one** function in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can however be changed:

Normal envi.

Quiet environ.

Noisy environ.

Car Kit

Headset

- You can set two personal profiles (<Empty>).
- The special profile **Aircraft mode** is cannot be changed, (page 55).

Activate

Menu → 



Select default profile or personal profile.

Activate Activate profile.

- Normal envi.
 - Quiet environ.
 - Noisy environ.
- Activate** **Options**
- Active profile.

Setup

Edit a default profile or create a new personal profile:



Select profile.

Options Open menu.

Change sett.
Select.

The list of available functions is displayed:

Ringer setting	page 67
Volume	page 67
Silent alert	page 67
Call screening.....	page 68
Info tones.....	page 68
Key tones	page 68
Illumination	page 66

When you have finished setting a function, return to the profile menu where you can change a further setting.

Profile menu

Options Open menu.

Activate	Activate the highlighted profile setting.
Change sett.	Change profile settings.
Copy from	Copy settings from another profile.

Car Kit

If an original Siemens Car Kit is used (page 75) the profile is activated automatically.

Headset

If an original Siemens headset is used (page 75) the profile is activated automatically as soon as the headset is in operation.

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**. The phone will switch off if you select this profile.



Scroll to **Aircraft mode**.

Activate

Activate profile. A security prompt must be confirmed. The phone switches itself off automatically.

Normal operation

Next time you switch on the phone and return to normal operation, the default profile will be activated.



→ Select function.

SAT menu



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SAT (Sim Application Toolkit) menu will appear in the main menu under Extras or directly above the control key (on the left).




Symbol for SAT menu.

Where there are several applications, these are displayed in a menu.

With the SAT menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.

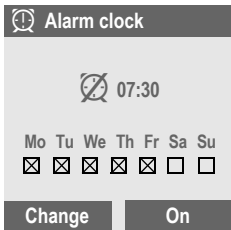

On / Off

Activate/deactivate the alarm.

Setting

Change

Display selected time and days for alarm calls:



Set time for the alarm call (hh:mm).



Navigate to the days.

Edit

Set the days for alarm calls.

OK

Confirm settings.

Note



Alarm clock switched on.



Alarm clock active (display in standby mode).



Alarm clock switched off.

Calculator



Enter number
(up to 8 digits).



Select calculate function.



Repeat procedure with
other numbers.



Result is displayed.



Press the right soft key re-
peatedly.



Toggle between "+" and "-".



Convert to percentage.



Save, recall number.



Exponent (max. two digits).

Special keys:



Set decimal point.



Add (hold **down**).

Recorder

You can use this application to
record, play and manage sounds and
voice messages.

Menu → → Recorder

or

Menu → → New MMS
→ New Recording

Individual recording

Use the inbuilt microphone to record
sounds, melodies and voice
messages.



Select <New record>.

Record

Press.
Recording starts. The
maximum time available
and recording duration
are displayed.

Pause Pause recording,
continue by pressing
Record.

Stop

End recording.


Save

Name your recording.

OK

Confirm.

Playback

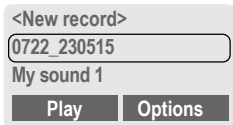

Select recording.

Play

The file is played.

With Handsfree mode

You are asked if you want to hear the recording via loudspeaker, **No/Yes**.

Sound file menu

Options Open menu

Play	Play highlighted file.
Handsfree	Toggles handsfree mode.
New record	Record a new file.
Delete	Delete highlighted file.
Delete all	Delete all files.
Rename	Rename the selected file.

Stopwatch

Menu → → Stopwatch

Two intermediate times can be recorded and saved.



Reset

Reset to zero.



Start/stop.



Intermediate time.

Stopwatch menu

Options Open menu.

Save Record the time(s) measured and assign a name to them.

Reset Reset stopwatch.

Stopwatch list Display the stored times.
View Display the stored times and intermediate times.

Rename Rename stored entry.

Delete Delete entry.

Delete all Delete list.

Countdown

Menu →  → Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

- Set** Set period of time.
- Start** Start counter.
- Stop** Interrupt counter.
- Edit** Change period of time.
- Reset** Reset counter to starting time.

Camera (Accessories)

You can use the phone to immediately view, save and send photos you have taken with the QuickPic camera. Pictures can be taken in two different formats:

- Low resolution: QQVGA 160x120 pixels, memory size up to 6 KB to send as a picture message (page 60).
- High resolution: VGA 640x480 pixels, memory size of one shot up to 40 KB - e.g. for further editing on PC. To allow the picture to be viewed on the phone display, a QQVGA picture is created for every VGA shot.

Camera Press when the camera has been attached (in standby mode).

or

Menu →  → Camera

The number of shots still available is shown.

OK Confirm.

The last picture taken is shown.



Scroll through photos.

Picture

A picture requires a few seconds to be processed.

Take Press. You will hear an advising tone when the exposure time has expired. The photo is shown on the display and saved automatically.

Flashlight

In the option menu the flashlight function can be switched on/off.

If the flash is switched on, a command is given to charge the flashlight before taking a picture:

Load Press **briefly**. The flashlight is charged.

Take Press, the photo is taken.

Sending a photo via MMS

You can easily send a photo as a MMS immediately after taking it.

Options Open menu.

Send in MMS

Select. Starts the MMS editor with the currently selected photo.

Note

Writing/sending MMS page 46

Camera menu

Options Open menu.

Use Flash Use flashlight (only when camera is plugged in).

Full screen Switch to full screen mode.

Delete Delete current picture after confirmation.

Delete all Deletes all pictures in the Camera folder after confirmation screen.

Move Move currently selected picture to another folder (if necessary, first choose resolution). See also **file system**, page 64.

Move all Select the required picture resolution to move all pictures of that resolution in the Camera folder to the subsequently selected folder.


Send in MMS Send picture by MMS.



Info Displays "Camera not connected" or "Battery too low" or number of possible new pictures in the current resolution mode.

Setup Set resolution:
Low
High & Low

The left soft key and the number keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function started at the touch of a button.

Note

The left soft key may already have a function allocated by your service provider (e.g. access to  SIM card services). It may not be possible to modify this soft key assignment.

The left soft key may also sometimes be replaced automatically by  /  to access a new message.

Key assignments available:


Phone number	page 27
Internet (WAP)	page 34
Bookmarks	page 34
Games&more	page 36
Calls missed	page 32
Calls received	page 32
Durat/charges	page 33
Divert	page 69
Hide ID	page 69
SIM services	page 56
New SMS	page 41
New MMS	page 46
Inbox	p. 44, 49
Illumination	page 66
GPRS	page 72
Addressbook	page 27
Businesscard	page 30

Calendar	page 37
Appointments	page 38
Alarm clock	page 56
Calculator	page 57
Camera	page 59
Filesystem	page 64
My menu	page 63

Left soft key

Assign a function/phone number to the left soft key for fast access.

Change

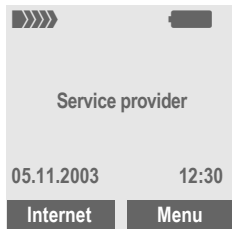

Internet

Press **briefly**, after confirmation you get in to Internet editor.

Change

Press.

- Choose a new application (e.g. **New SMS**) from the list.
- Special case **Phone number**. Select a name (e.g. "Carol") from the Addressbook to assign to the soft key.

Select

Confirm setting.

Apply

The setting "Carol" is used here only as an example.

Carol Hold **down**.

Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. For available key assignments, see page 61. Number key 1 is reserved for the mailbox (page 40).

Edit

In standby mode:



Press a number key (2-9).
If the key is not yet assigned:

Set Press.

or

New SMS Press **briefly** (if, for example **New SMS** is assigned).

Change Scroll to application in the list.

Special case: **Phone number**. Select a name from the Addressbook for assignment to the key.

Special case: **Bookmarks**. Scroll to a URL in bookmark list for assignment to the key.

Apply

Select a stored phone number or start a stored application (e.g. **New SMS**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right soft key e.g.:

New SMS Hold **down**.

Or simply



Hold **down**.

My menu Create your own menu with frequently used functions, phone numbers or WAP pages.

The list with 10 possible entries is preset. You can, however, change it as much as you want.

Note

For fast access from standby mode you can set the function **My menu** on the left soft key (page 61).

Activate



Select the required entry.

Select

Press.

or



If the entry selected is a phone number, you can also call it with the Call key.

Change sett.

You can replace each preset entry (1-10) with another entry from the selection list.



Select the required entry.

Options

Press.

Change sett.

Select.

Select

Press.



Select the **new** entry from the selection list.

Set

Press.

If you have selected a phone number or a WAP favourite as a new entry, the corresponding application is started.

Reset all

Options

Press.

Reset all

Select.

After confirmation and entering the phone code, the default entries are reset.

To organise your files, you can use the file system like a PC file manager. The file system assigns special folders to different data types.



A list of the folders is displayed.

Navigate through this list using the control key:



Scroll up and down.



Go back from folder.

Open Open folder.

Index structure

The file system assigns special folders to different data types.

Folder	Contents	Format
Animations	Animations	*.bmx *.gif
Camera	Photos taken by camera	*.jpg
Color schemes	Selection of color schemes	*.col
Pictures	Pictures/ images	*.bmp, *.wbmp, *.jpg, *.gif, *.png, *.ems
Sounds	Ring tones, melodies	*.mid, *.imy, *.amr

File system menu

Options Open menu

Open	Open folder. With Color scheme you are able to Activate your choice.
Delete	Delete highlighted entry.
Delete all	Delete all entries.
Rename	Change highlighted entry.
Send via ...	Send via MMS. This function is available with Camera, Pictures and Sounds.
Sort	Set sort criteria (alphabetical, type).
Attributes	Display the information of the current file.
Drive info	Display capacity used and available.


Display

Menu →  → Display
→ Select a function.

Language

Set the language of the display text. "Automatic" will set the language of your home service provider. If a language that you don't understand happens to be set, the phone can be reset to the language of your service provider.

Return to this language in standby mode:

*#0000# 

T9 input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry.

Wallpaper

Set background graphic for display.

Logo

Choose the picture to be displayed instead of the provider logo.

Additional logos:
www.my-siemens.com/logos

Colour scheme

Select colour scheme for the whole service system.

Activate color scheme



Select color scheme.

Activate Activate.

Load color scheme

Selection list includes two color schemes, you can change the other one and load the new color scheme e.g. via WAP (blue is standard).

Options Open menu.

Load Select color scheme.

Screensaver

Screensaver is entered after 2 min period.

Style

The style for the screensaver can be selected from three alternatives:

Clock, Picture or Energy saving.

Picture

Select a picture for screensaver:

Select Press.



Pictures are shown, scroll with control key.

Select Select a picture.

Change/delete a screensaver picture:

Delete Press and Picture for screensaver is deactivate.

or

Select Press and change a new picture for screensaver.

The screensaver function is ended by an incoming call or by pressing any key.

Additional screensavers:

www.my-siemens.com/screensaver

Start up anim.

Activate/deactivate the animation to be shown when switching the phone on.

Shutdn anim.

Activate/deactivate the animation to be shown when switching the phone off.

Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Change Activate/deactivate.



Replace old message with new one.

OK Confirm changes.

Illumination

Set display illumination.



Press the control key repeatedly to adjust display brightness up or down.

Contrast

Set display contrast.



Press the control key repeatedly to adjust display contrast up or down.

Audio

Menu →  → **Audio**
→ Select function.

You can set the tones to match your needs.

Ringer setting

On/Off Activate/deactivate all tones.

Beep Reduce ringtone to a short signal (beep).

Note



Display: Beep.



Display: Ringer off.

Switch ringtones on/off page 79

Silent alert

Activate/deactivate the silent alert (functions in addition to ringer).

Volume

Set the volumes for ring tones.



Select:

Calls

Group calls

Alarms

Alarm clock

Messages

Select

Press.



Set volume.

If two independent phone numbers are registered on your phone, you can set different volumes for them (page 79).

Note

Please make sure you have accepted the call before holding the phone to your ear. This will prevent a loud ring tone from damaging your hearing!

Melodies



Select:

Calls

Group calls

Alarms

Alarm clock

Messages

Select

Select, the melody is played.



Select ringtone.

OK

Confirm.

Note

Individual ringtones can be sent to you via **SMS** (page 44) or you can download them via **WAP**. See also **MyPhone** (page 17).

Call screening

Only calls from numbers that are in the Addressbook or in a group are signalled audibly or by silent alert. Other calls are only displayed.

Key tones

You can set the acoustic key tone:
Click or **Tone** or **Silent**

Minute beep

During the call, you will hear a beep once a minute as a reminder.

Info tones

Set service and alarm tones:

On/Off Activate/deactivate tones.

Extended If switched on, a wider range of service tones is available, e.g.:


- Reminds to call again,
- Network found,
- Battery low warning.

Keys

Menu →  → **Keys**
→ Select function.

Any to answer

You can press any key to accept an incoming call.

(except ).

Key tones

You can set the acoustic key tone:
Click or **Tone** or **Silent**

Phone setup

Menu →  → Phone setup
→ Select function.

Call waiting



If you are registered for this service, you can check whether it is set and activate/deactivate it.

Hide ID



If activated, your phone number will not appear on the recipient's display (depending on the service providers).

Divert

You can set the conditions for which calls are diverted to your mailbox or other numbers.

Set up call divert (example):

Unanswered



Select **Unanswered** (covers the conditions **Not reachable**, **No reply**, **Busy**)

Select

Press and select **Set**. Enter the phone number to which the call will be diverted.

OK

Press. After a short pause, the setting is confirmed by the network.

All calls



Divert all calls. Symbol in the top line of the display in standby mode.

Not reachable

Divert occurs if phone is switched off or is out of range.

No reply

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5 second intervals.

Busy

Divert occurs if a call is in progress. If **Call waiting** is activated (page 69), you will hear the call waiting tone during a call.

Check status

You can check the current divert status for all conditions.

After a short pause, the current situation is transmitted by the network and displayed.



Condition set



Not set.



Status unknown (e.g. with a new SIM card).

Clear all

All set diversions are cleared.

Note

Note that the divert is stored in the network and not in the phone (for example when the SIM card is changed).

Check condition or delete it

First select the condition.

Select Press.

Check status
Select.

or

Clear Select.

Reactivate divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm phone number.


Edit phone number

Proceed as with "Set divert". When the stored number is displayed:

Clear Clear the old number, enter new one and confirm.

Fact. settings

Reset phone to default values (factory setting).

*#9999# 

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternative input in standby mode:
*#06#


Checking software version page 79.

Auto off

The phone switches off each day at the set time.

Activate

Time Press.

 Enter time (24-hour clock).

OK Confirm.

Deactivate

Manual Press.

OK Confirm.

Clock

Menu →  → **Clock**
→ Select function.

Time



Select **Time or Date**.

Change Press and edit the right time or date.

OK Press.

Note

If the battery is removed for longer than 30 seconds, the clock must be reset.

Setting date format:

DD: Day (2-digit)

MM: Month (2-digit)

YYYY: Year (4-digit)

Time zones

Set the time zone for your area.



Select the required time zone from list.

Select Select.

Date format

Select **DD.MM.YYYY** or **MM/DD/YYYY**

Time format

Select **24h** or **12h**.

Show clock

Activate/deactivate time display.

Connectivity

Menu →  → **Connectivity**
→ Select function.

GPRS



Yes/No Activate/deactivate GPRS.

GPRS info

Display information on the connectivity status.

Data services

For the **MMS**, **WAP** applications at least one connection profile must be set up and activated.

If necessary enter **CSD settings** and **GPRS settings** (you will receive the information on this from your service provider).

The current settings for a service provider can be found on the Internet at

www.my-siemens.com/customercare under "FAQ".

To modify a profile



Select a profile.

Edit Press, select either **CSD settings** or **GPRS settings**.

Edit Press.



Enter data.

Save Save settings.

To create a new profile

Add profile



Select.

Enter profile name, validate with **OK**.

Choose either **CDS settings** or **GPRS settings**.



Enter required data in the fields.

Save

Save.

CSD settings menu

(Circuit Switched Data)

Dial-up number: Enter ISP number.

Call type: Select ISDN or analogue.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

GPRS settings

(General Packet Radio Service)

APN: Enter your Access Point Name.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

Security

Menu →   → **Security**
→ Select function.

Both phone and SIM card are protected against misuse by several security codes.

Codes

PIN control, Change PIN, Change PIN2, Chg.phonecode (see page 15).

Only

Restrict calls to SIM-protected numbers in the Addressbook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN 2 input, the **whole** Addressbook can be protected with the phone code (page 16).

This SIM only

(Phone code protected)

By entering a phone code, the phone can be linked to a SIM card. Operation using a **different** SIM card is not possible without knowing the phone code.

If the phone is to be used with a different SIM card, enter the phone code when requested.

Barrings

Barring restricts the use of your SIM card (this is not supported by all service providers). You need a 4-digit password which your service provider will give you. You may need to register each barring separately with your service provider.

All outgoing

All outgoing calls except emergency numbers 999 and 112 are barred.

Outgo internat

Only domestic calls are possible.

Out.int.x home

International calls are not permitted, except for calls to your home country.

All incoming

The phone is barred for all incoming calls.

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring.

Clear all

Clear all barrings.

Network

Menu →  → **Network**
→ Select function.


Line



Two independent phone numbers have to be registered.

Select

Select phone number in current use.

 Display current phone number.

Note

Settings for phone numbers page 79

Lock line 1/Lock line 2

(Phone code protected)

You may limit usage to one phone number.

Network info

The list of GSM networks currently available is displayed.



Indicates forbidden service providers (depending on SIM card).

Choose network

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto network** is set.

Auto network

Activate/deactivate, see also **Choose network** above.

If "Automatic network" is activated, the next network on the list is dialled in ranking order of your "preferred networks". Alternatively select a different network manually from the list of the available GSM networks.

Pref. network

Set the service providers you prefer when you leave your home network.

Note

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Create a new entry:

- Select empty line, press **Entry**, then select another entry from the list of service providers and confirm.

Change/delete entry:

- Select entry, press **Change**, then select another entry from the list of service providers and confirm or press **Delete**.

Accessories

Menu →  → Accessories
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree Car Kit.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Indication in display.

Auto off

When powering the unit from the car, the time between switching off the ignition and deactivation of the phone can be adjusted.

Headset

Only in conjunction with an original Siemens headset. The profile is automatically activated when headset is plugged in.

Accept call with Call key or PTT key (Push To Talk), even when key lock is activated.

Auto answer

Calls are accepted automatically after a few seconds.

Auto answer

If an incoming call is not noticed, there is a risk of eavesdropping by caller.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss.

As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Control codes (DTMF)

Sending control codes

You can enter control codes (digits) during a call so that an answering machine can be controlled remotely. These digits are directly transmitted as DTMF tones (control codes).

Menu Open call menu.

Send DTMF

Select.

Use the Addressbook

Save phone numbers **and** control codes (DTMF tones) in the Addressbook like a normal entry.



Enter phone number.



Press until a "+" appears on the display (pause for connection setup).



Enter DTMF signals (digits).



If necessary enter further pauses of three seconds each to ensure correct processing at destination.



Enter a name.



Press.

You can also store just the DTMF tones (digits) without a phone number and send these during a call.

Dial-up access CSD

(Circuit Switched Data)

Data transfer is made via a data connection to a default IP address of your network provider or service provider. This connection can be used for the exchange of data (e.g. for access to the Internet or for using WAP services).

As long as this connection is established to use services, charges for the connection accrue according to the price list of your network provider or service provider.

Dial-up access GPRS



(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. If you use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently.

EMS

(Enhanced Messaging Service)

Besides (formatted) texts, you can also send

- pictures (bitmaps) up to max. 32 x 32 pixels (black and white),
- sounds,
- animations (sequence of 4 pictures) 8 x 8 and 16 x 16 pixels (black and white),

using the EMS.

The elements listed above can be transmitted individually or together in an SMS.

With EMS, pictures and sounds can also be sent (e.g. as screensavers and ringtones).

This can result in messages exceeding the length of a single SMS. In this case individual text messages are concatenated to form a single message.

International dialling codes

Many international dialling codes are stored in your phone. In standby mode:



Hold **down** until a "+" is displayed. This replaces the first two digits of the international dialling code.



Press.

Select the required country. The international dialling code is displayed. Now add the national number (in many countries without the first digit) and press the Call key.

Message memory full

The SIM memory is full when the message icon flashes. **No** more SMS messages can be received. Delete or save messages (page 45).

Outside your own home network

If you are outside your "home" network your phone will automatically dial a different GSM network (page 74).

Own numbers

You can enter your "own numbers" in the Addressbook (e.g. fax) for information. These numbers can be changed or deleted and also sent as an SMS.

Performance

A full battery will give you between 60 to 250 hours of standby time or 1,5 to 4,5 hours of talktime.

The length of performance depends on the operating conditions:

Operation carried out	Time (mins)	Decrease in the standby time by
Calling	1	30 - 120 minutes
Display back light *	1	90 minutes
Network search	1	5 - 10 minutes
* key input, games, organiser etc.		

If the phone is exposed to extreme heat, standby time is reduced considerably. Avoid exposing the phone to direct sunlight or placing it on a radiator.

Phone number memo


You can type in a phone number on the keypad during a phone call. The person you are talking to will hear this. The number can be stored or dialled after the current call has ended.


Quick menu selection

All menu functions are numbered internally. By entering these numbers one after the other, the function may be started at once.

E.g. to write a new text message:

Menu Press.


 for **Messages**


 for **New SMS**

Service numbers

There may be numbers saved in the SIM card (<Special books>, <Service numb.>, page 30) that were put there by your service provider. You can call local or nationwide information services or use services of the service provider.

Signal strength

 Strong signal.

 A weak signal reduces the call quality and may lead to loss of connection. Change your location.

Set Divert

Divert Diverts the caller to the mailbox, for example, if divert **Busy** (page 69) is set and the **Call waiting** function (page 69) is activated.

SIM card problems

If you have inserted your SIM card and despite this, the following message appears:

Please insert your SIM card!

Please ensure that the card is **correctly** inserted and the contacts are clean; if necessary, clean them with a dry cloth. If the card is damaged, please contact your service provider.
See also "Questions & Answers" page 82.

SMS status report

If the phone was unable to send the message to the service centre, a retry option is available. If this attempt also fails, contact your service provider.

The confirmation **Message sent!** only indicates transmission to the service centre, which then tries to deliver the message within a certain time-frame.

See also "validity period", page 51.

Software version

To display the software version of your phone in standby mode enter: ***#06#**, then press **Info**.

Switch ringtones on/off/beep



Hold down.

In standby mode

All sounds (including the ringtone) can be switched off and then on again.

You can also select **Beep**.

During a call

Switch off the ringtone only for the **current** call/alarm (not if "Any key answer" page 68 is active): Accepting or refusing the call ends this function.

- The call will still be displayed.
- The silent alert remains active if it has been switched on previously.

Two phone numbers



Special settings can be given to each phone number (e.g. ringtone, call divert, etc.). Switch to the required number first.

To switch the phone number/line in standby mode:



Press.

Line 1

Press.

WAP

(Wireless Application Protocol)

WAP is a technical standard that provides the basis for connecting mobile radio networks with the Internet. WAP allows you to surf the Internet using a mobile phone, download games and applications and to use WAP services such as news, stock market data and information services.

Without SIM card

If you switch on the phone **without a** SIM card, you can use some of the phone functions.

Menu Press soft key. The functions are displayed.

SOS Emergency, SOS.

Data Exchange Software

With Data Exchange Software you can increase the functionality of your phone together with a Windows® PC. Phone and PC are connected with one another via data cable.

The Data Exchange software works with Windows® Explorer like an extra drive and mirrors the contents of the file system (page 64) on your phone.



Mobile


You have access the data in the applications on the phone and synchronise these with the PC by easy drag and drop.

Warning!

When you access the file system, please ensure that no files are deleted that are essential to running applications on the mobile phone, e.g. the "Licenses" index.

If you have questions regarding the use of your phone, you can contact us at www.my-siemens.com/customer-care at any time. In addition to this we have listed some frequently asked questions and answers below.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error"	
Insufficient standby time.	Frequent use of organiser and games.	Restrict use if necessary.
	Display illumination switched on.	Switch off display illumination (page 66).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temp. out of range +0 °C to +45 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device plug socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
Battery faulty.	Replace battery.	
SIM error	SIM card not correctly inserted.	Check that the SIM card is inserted correctly (page 8).
	SIM card contacts dirty.	Use a dry cloth to clean the SIM card.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g. broken).	Visually inspect the damage. Have SIM card replaced by service provider.

Problem	Possible causes	Possible solution
No connection to network.	Weak signal.	Move to higher location, to a window or an open space.
	Outside GSM range.	Check coverage area of the service provider.
	SIM card not valid.	Contact the service provider.
	New network not authorised.	Try manual selection or select a different network (page 74).
	Network barring is set.	Check barrings (page 73).
	Network overloaded.	Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (page 74). Switching the phone off and on may speed this up.
Calls not possible.	Second line set.	Set first line  (page 74).
	New SIM card inserted.	Check for new restrictions.
	Charge limit reached.	Reset limit with PIN 2 (page 33).
	Credit used up.	Load credit.
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may be set by your service provider. Check barrings (page 73).
No entries in Addressbook possible.	Addressbook is full.	Delete entries in Addressbook or transfer to SIM card (page 28).
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (page 69).
SMS (text message) flashing.	SMS memory is full.	To free up capacity, delete or file messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Memory problems for, e.g. messages, ring tones, pictures.	Phone memory full.	Delete files in the applicable areas.
No WAP access.	Profile not activated, profile settings wrong/incomplete.	Activate and set WAP profile (page 36). If necessary ask your service provider.

Problem	Possible causes	Possible solution
Message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number of the service centre is not set or it is wrong.	Set service centre (page 51).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures and sounds not displayed at destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check settings or ask your service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or removed by your service provider via the SIM card.	Check with your service provider.
Charge counter does not work.	Charge pulse is not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and insert them again. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Set phone to vertical position in air flow. Do not dismantle the phone!	

Reset all settings to factory default (see also page 70): * # 9 9 9 9 #



We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.my-siemens.com/customercare

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" (page 82) in this user guide.

You can also get personal advice about our range of products on our Premium Hotline:

United Kingdom 0906 9597500
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then info) and if available, your Siemens Service customer number.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 50 31 81 49
Croatia	0 16 10 53 81
Czech Republic	02 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13

Mexico	01 80 07 11 00 03	Singapore	62 27 11 18
Morocco	22 66 92 09	Slovak Republic	02 59 68 22 66
Netherlands	0 90 03 33 31 00	Slovenia	0 14 74 63 36
New Zealand	08 00 27 43 63	South Africa	08 60 10 11 57
Nigeria	0 14 50 05 00	Spain	9 02 11 50 61
Norway	22 70 84 00	Sweden	0 87 50 99 11
Oman	79 10 12	Switzerland	08 48 21 20 00
Pakistan	02 15 66 22 00	Taiwan	02 23 96 10 06
Paraguay	8 00 10 20 04	Thailand	0 27 22 11 18
Philippines	0 27 57 11 18	Tunisia	71 86 19 02
Poland	08 01 30 00 30	Turkey	0 21 65 79 71 00
Portugal	8 08 20 15 21	Ukraine	8 80 05 01 00 00
Qatar	04 32 20 10	United Arab Emirates	0 43 31 95 78
Romania	02 12 04 60 00	United Kingdom	0 87 05 33 44 11
Russia	8 80 02 00 10 10	USA	1 88 87 77 02 11
Saudi Arabia	0 22 26 00 43	Vietnam	84 89 30 01 21
Serbia	01 13 07 00 80	Zimbabwe	04 36 94 24

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

CE 0889

Technical data

GSM class:	4 (2 Watt)
Frequency range:	880 ... 960 MHz
GSM class:	1 (1 Watt)
Frequency range:	1,710 ... 1,880 MHz
GSM class:	1 (1 Watt)
Frequency range:	1,850 ... 1,990 MHz
Weight:	75 g
Size:	101x44x21 mm (72 ccm)
Li-Ion battery:	630 mAh

Operating temp.:	-10 °C ... 55 °C
Standby time:	60...250 h
Talk time:	1,5...4,5 h
SIM card:	3,0 V

Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here

the number of the SIM card (on the card):

.....

15-digit serial number of the phone (under the battery):

.....

Customer Service number of the service provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Basics

Li-Ion Battery 700mAh EBA-510

L36880-N5601-A100

Spare battery.

Travel Charger

ETC-500 (Euro): L36880-N5601-A104

ETC-510 (UK): L36880-N5601-A105

Travel charger with an extended input voltage range of 100-240V.

Desk Top Charger EDC-510

L36880-N4501-A101

The desktop charger enables convenient charging of the mobile phone and an additional battery.

Headset PTT HHS-510

L36880-N5601-A108

Headset with PTT key to activate voice recognition and to accept and end calls.

Carry Set FCS-510

L36880-N5601-A119

Includes a belt clip and a retaining clip for discretely fastening the mobile phone on clothes or in a bag.

Carrying Cases

A range of carry cases is available at specialist shops or you can visit the Siemens Mobile Store online:

Data/Applications

Data Cable DCA-500

S30880-S5601-A802-1

For connecting the phone to the serial RS232 port of the PC.

Data Cable USB DCA-510

S30880-S5601-A810

For connecting the phone to the USB port of the PC. Allows data exchange and battery charging.

Innovations

QuickPic Camera IQP-500

L36880-N5701-A109

Camera that plugs into the mobile phone. Allows you to take photos and send them via the mobile phone to other mobile phones using MMS or via e-mail to a PC. Integrated flashlight that can be switched on or off as required.

SIEMENS

Original Siemens Accessories

Original
Accessories

[www.siemens.com/
mobilestore](http://www.siemens.com/mobilestore)

Car Solutions

Car Charger ECC-500

L36880-N5601-A106

Charger for the cigarette lighter socket in the car.

Car Kit Portable HKP-500

L36880-N5601-A109

Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Simply plug into the cigarette lighter socket. Ideal for easy transfer between vehicles.

Mobile Holder HMH-500

L36880-N5601-A116

Cradle without antenna port.

Basic Car Pack HKB-500

L36880-N5601-A118

Allows in-car charging of your mobile phone as well as handsfree talking. Contains a Car Charger, a Headset PTT and a Y adapter.

Optional Car Kit accessories

Car Handset HKO-550:

L36880-N3015-A123

VDA Adapter Cable HKO-560:

L36880-N4001-A121

Car Data Adapter HKO-530:

L36880-N5701-A108

Push To Talk Key HKO-520:

L36880-N4501-A135

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:



Original Siemens Accessories

[www.siemens.com/
mobilestore](http://www.siemens.com/mobilestore)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union.

For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.


- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.


To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.


Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:


- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention).
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated.
 - The software is manipulated.
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.).
 - Devices fitted with accessories not authorised by Siemens.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

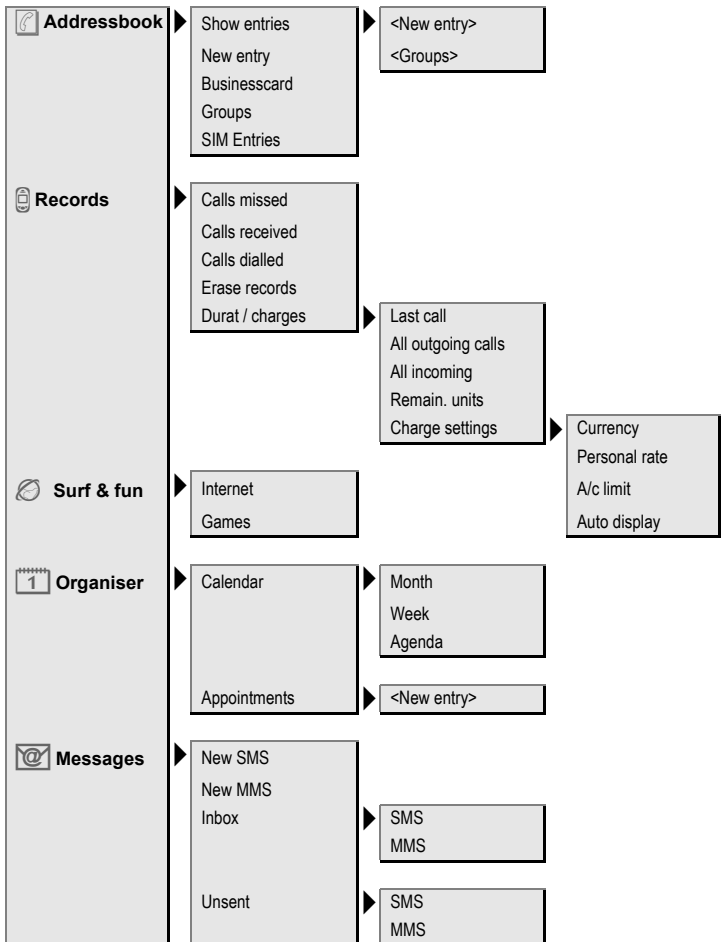

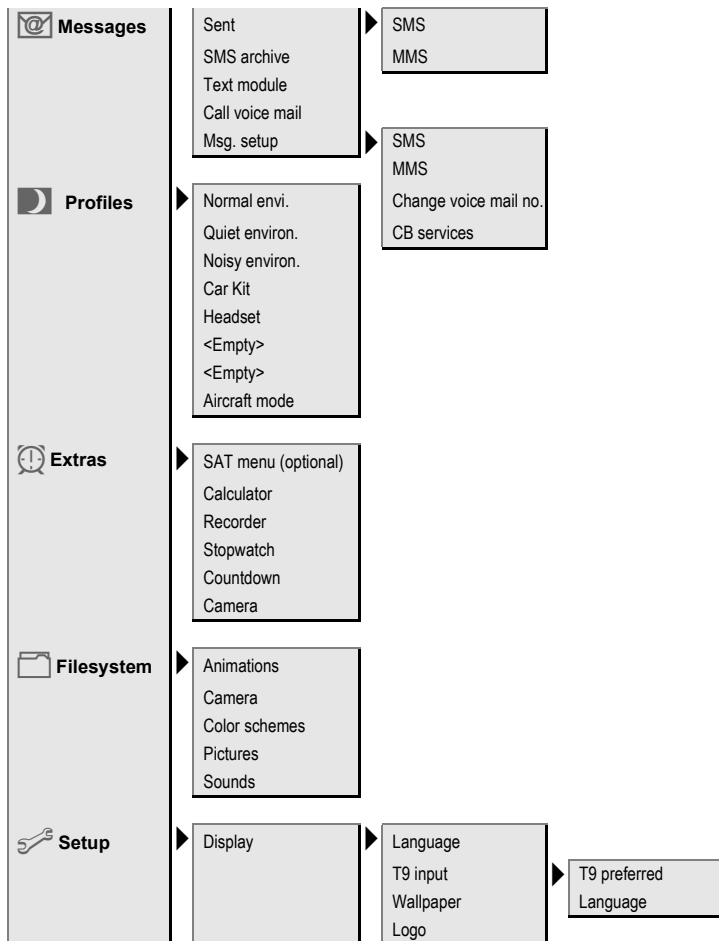

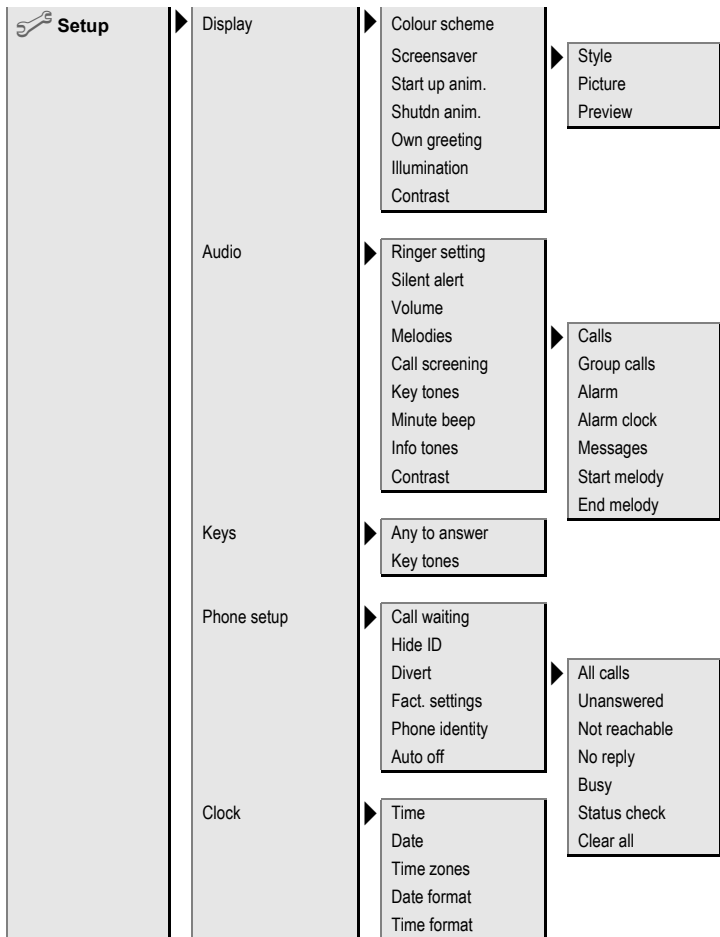

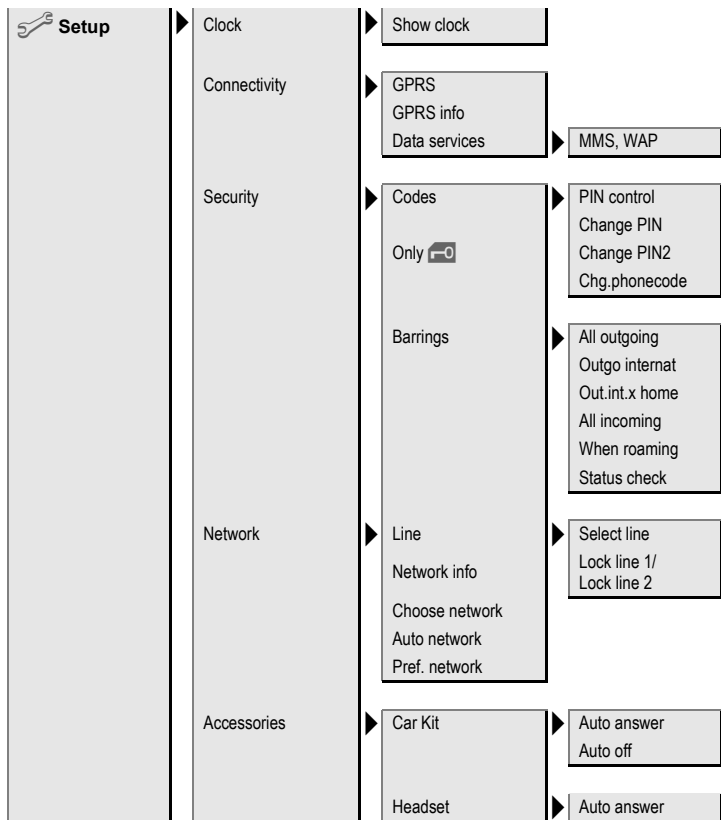

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance

with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0,72 W/kg****.

The SAR information can also be found on the Siemens web site at **www.my-siemens.com**

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**www.who.int/peh-emf, www.mmfai.org,
www.my-siemens.com**

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10g body tissue.

**** SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at www.my-siemens.com

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTRO-MAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be

well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0,72 W/kg***.

SAR information can also be found at www.my-siemens.com

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:
www.who.int/peh-emf, www.mmfai.org,
www.my-siemens.com

** averaged over 10g of tissue.

*** SAR values may vary depending on national requirements and frequency bands. Information for different regions can be found at www.my-siemens.com

- A**
- Address book..... 27
 - Agenda..... 38
 - Aircraft mode 55
 - Alarm 56
 - appointment..... 39
 - type..... 39
 - Alarm clock..... 56
 - Alarm tones..... 67
 - Answering service (external)..... 40
 - Any key answer, call accept..... 68
 - Appointments..... 39
 - Archive (SMS)..... 45
 - Audio 67
 - Auto redial previous numbers 19
- B**
- Battery 8, 9
 - performance..... 78
 - quality statement..... 76
 - Browser..... 34
 - Business card..... 30
- C**
- Calculator 57
 - Calculator functions..... 57
 - Calendar..... 37
 - Call
 - accept/finish 19
 - barring 73
 - conference 22
 - end..... 18
 - reject..... 20
 - several simultaneously..... 21
 - swap (change)..... 20
 - Call diversion 69
 - Call forwarding 22
 - Call lists 32
 - Camera 58
 - Car accessories..... 90
 - Car Kit..... 75
 - Cell Broadcast (CB) 53
 - Charging battery 9
 - Conference 22
 - Control codes (DTMF)..... 76
 - Countdown..... 59
 - CSD..... 72, 77
 - data 72
 - Customer care..... 85
- D**
- Data Exchange Software 81
 - Data service 72
 - Dial-up access (connection)..... 72
 - Display settings..... 65
 - Display symbols 7
 - Diversion 69
 - Downloading ringtones,
icons..... 44
 - Duration/costs..... 33
- E**
- Emergency number..... 11
 - EMS 77
 - Enter PIN..... 10
 - Extras 56
- F**
- Factory settings..... 70
 - Fast access key..... 61
 - File system..... 64
 - Flashlight..... 60
 - Forwarding (call)..... 22

G		
Games & More.....	36	
Getting started	8	
GPRS	72	
settings	72	
Group.....	29	
SMS to group.....	43	
H		
Handset volume	18	
Handsfree talking	20	
Headset.....	75	
Accessories	89	
Hide ID	69	
Hold call	21	
Home network.....	74	
I		
Icons	7	
Identity number (IMEI).....	70	
Inbox		
MMS.....	49	
SMS.....	44	
Index (file system)	64	
Information services (CB).....	53	
International dialling codes.....	77	
Internet (WAP).....	34	
K		
Keypad (settings).....	68	
L		
Loss of phone, SIM card	88	
M		
Mailbox.....	40	
Maintenance tips	88	
Menu		
control	12	
My menu	63	
quick selection	78	
Message		
CB.....	53	
MMS	48	
SMS	43	
Message memory.....	77	
Microphone on/off	22	
MMS		
lists	49	
profile	52	
Muting (microphone).....	22	
My menu	63	
N		
Network barring.....	73	
Network functions	74	
New record (Extras)	58	
Notes A-Z.....	76	
O		
Only ,	73	
Organiser	37	
Own numbers	78	

- P**
- Performance of battery 78
 - Phone (settings) 69
 - Phone barring 73
 - Phone code 15, 16
 - Phone data 88
 - Phone identity number (IMEI) 70
 - Pictures and sounds (SMS) 42
 - PIN 2 15
 - Prevent accidental activation 16
 - Product data 88
 - Profiles
 - MMS 52
 - Phone 54
 - WAP 36
 - PUK, PUK2 15
- R**
- Recorder 57
 - Redial previous numbers 18
 - Reminder 19
 - Ringtones 67
- S**
- Safety precautions 3
 - Screensaver 66
 - Second call 21
 - Second phone number
(connection) 74
 - Security 15, 73
 - Security numbers 15
 - Service centre (SMS) 51
 - Service tones 68
 - Set clock 71
 - Set ringtone 67
 - Set time/date 71
 - Settings 65
 - Shown in the display 7
 - Signal strength 78
 - SIM card
 - entry 30
 - insert 8
 - problems 79, 82
 - remove barring 16
 - SMS 41
 - archive 45
 - lists 44
 - pictures and sounds 42
 - read 43
 - SMS to group 43
 - Software version 79
 - SOS 11
 - Special characters 23
 - Speed dialling keys 62
 - Standard values 70
 - Standby mode 11
 - Standby time 9, 78
 - Start menu (WAP) 34
 - Stopwatch 58
 - Surf & Fun 34
 - Swap 20
- T**
- T9 65
 - T9 text entry 24
 - Talktime (battery) 78
 - Technical data 88
 - Text module 26
 - Time zones 71
- U**
- Upper/lower cases 23

V

Validity	
MMS.....	52
SMS.....	51
Voice mail (mailbox)	40
Volume	
handset	18
profiles	54
ringtone	67

W

WAP	
browser	35
parameters.....	36
Warning tones	68